



HOW TO USE

Before First Use

- Read all instructions and safeguards.
- Remove all packaging and check that all parts and accessories are in good condition.
- Properly dispose plastic bags as they can pose a risk to children.
- Remove the inner pot from the cooker and clean with warm, soapy water. Rinse and dry thoroughly before inserting back into the cooker.
- Wash all accessories in warm, soapy water. Rinse and dry thoroughly.
- Wipe the cooker's body clean with a damp cloth.

※ WARNING Electrical Shock Hazard. Cook only in removable cooking pot. Never place water or food directly into the unit without the provided inner pot.

※ CAUTION Burn Hazard. Steam can cause injury.

Rice & Grain

- Using the provided rice measuring cup, add rice to the inner pot.
- For white rice, rinse with water for 10 seconds and drain. Repeat this process at least 2 times, or until the water runs clear.
- For white rice, fill the inner pot with water to the line that matches the number of cups.
- Place the inner pot into the rice cooker then place the lid on securely.
- Plug the power cord into an available 120V AC wall outlet.
- Press the COOK button down. The COOK indicator light will illuminate as the cooker begins heating.
- Once rice is ready, the COOK button will automatically flip up and the cooker will switch to WARM.
- When finished serving, turn the cooker off by unplugging the power cord.

HOW TO USE

Steam

- Fill the inner pot with water until it is half full.
- Place the inner pot into the rice cooker.
- Place food in the provided steam tray, then place the tray on the inner pot. Securely set the lid on top of the steam tray.
- Plug the power cord into an available 120V AC outlet.
- Press the COOK button down.
- The COOK indicator light will illuminate as the cooker begins heating.
- Cook until the food is cooked to your liking.
- Unit automatically switches to WARM when all water is evaporated.
- NOTE : If unit switches to WARM and food needs more steaming, add water to Cooking Pot and press COOK button down to cook.
- Remove steamed food once it is done cooking. Wear protective heat-resistant gloves to prevent injury as the steam tray will be hot.
- When finished steaming, turn the rice cooker off by unplugging the power cord.

※ NOTE : Steaming can be done while cooking rice. Use extra caution when opening the lid as the steam can result in burns.

How to Clean

- Unplug the unit to power off.
- Use a neutral detergent and a soft sponge to clean the inner pot, glass cover and steam tray.
- Both the inside and the outside of the inner pot must be clean. Residue on the inner pot may negatively affect the performance of the rice cooker.
- Wipe the exterior of the unit with a soft rag or sponge.
- Wash all accessories. Dry thoroughly before storing.

Notes

- Do not scrape the inner pot with sharp objects when cleaning. Doing so may damage the coating of the inner pot.
- Wipe off any residual moisture on the unit with a soft, dry cloth after each use.

MODE D'EMPLOI

Vapeur

- Remplir la cuve d'eau à moitié.
- Placer la cuve dans le cuiseur à riz.
- Placez vos aliments dans le panier à vapeur fourni, puis placez le panier sur la cuve. Assurez-vous que le couvercle est bien en place sur le panier vapeur.
- Branchez le cordon d'alimentation sur une prise murale 120V AC.
- Appuyez sur le bouton de cuisson. Le voyant CUISSON s'allume et la cuisson commence.
- Laissez cuire les aliments à la vapeur jusqu'à ce qu'ils atteignent la cuisson désirée. L'appareil passera automatiquement en mode chauffage une fois toute l'eau évaporée.

※ NOTE : Si l'appareil passe en mode CHAUFFAGE et que les aliments nécessitent plus de cuisson, ajoutez de l'eau dans la cuve, puis appuyez à nouveau sur le bouton de cuisson.

- Retirez les aliments une fois la cuisson terminée. Le panier étant très chaud, portez des gants de protection anti-chaleur pour éviter toute brûlure.
- Une fois la cuisson à la vapeur terminée, éteignez le cuiseur à riz en débranchant le cordon d'alimentation.

※ Vous pouvez faire cuire du riz et effectuer une cuisson à la vapeur en même temps. Soyez très prudents de ne pas vous brûler avec la vapeur en ouvrant le couvercle.

COMMENT NETTOYER

- Débranchez l'appareil pour l'éteindre.
- Nettoyez la cuve, le couvercle et le panier vapeur avec une éponge douce et un détergent neutre.
- Assurez-vous que l'intérieur et l'extérieur de la cuve sont parfaitement propres. Tout résidu peut affecter les performances du cuiseur à riz.
- Essuyez l'extérieur de l'appareil avec un chiffon doux ou un éponge.
- Lavez tous les accessoires, puis séchez-les soigneusement avant de les ranger.

Notes

- Ne raclez pas la cuve avec des objets pointus, cela pourrait abîmer son revêtement.

Après chaque utilisation, essuyez l'appareil avec un chiffon doux pour enlever toute trace d'humidité.

Electric Rice Cooker

USER MANUAL / MANUEL DE L'UTILISATEUR

CR-0301C SERIES

3 cups (uncooked) / 6 cups (cooked)
3 tasses (non cuites) / 6 tasses (cuites)

CUCKOO ELECTRONICS AMERICA, INC.

CHECK BEFORE ASKING FOR SERVICE

▼ If the cooker is not used according to the specified procedure, it may not function properly even if it's not a malfunction.

If the rice doesn't cook properly or the warming function seems abnormal, please refer to the checklist below.

If the issue persists after checking, contact our Customer Care Center.

Symptom	Checkpoint	Action
Rice water overflows	• Was there too much water added beyond the criteria water level?	• Open the lid and take out water.
Cooked rice is: • Too thick • Half-cooked • Too soft-boiled	• Is water adjusted to proper level? • Is there any foreign matter stuck at the outer bottom of inner pot, or is the bottom of inner pot uneven? • Was the lid open before the steam lamp turned off after conversion to mode? • Was the power cut or did the cooking switch go off while the rice was cooking?	• Adjust the water level according to the measurement markings • Remove any foreign substances. • Keep the lid closed and let the steam settle as long as possible. • Do not touch Cooking switch until rice cooking is completed and the switch turns OFF automatically.
Rice is scorched and stuck to Inner pot.	• Was the rice washed properly? • Was Cooking switch pressed forcefully even after the rice cooking was completed and the cooker switched to warm mode? • Was the rice cooked without the scorched trace at the bottom of the inner pot washed off? • Was there any foreign matters stuck between the heating plate and inner pot when rice was cooked?	• Wash rice thoroughly. • Once cooking is complete, do not press the Cooking switch again. • Wash the inner Pot thoroughly. • Clean the heating plate and inner pot so foreign matter does not stick to them.

MODE D'EMPLOI

Vapeur

▼ Si le cuiseur à riz n'est pas utilisé conformément aux instruction, il peut dysfonctionner, même si cela n'est pas dû à une panne.

Si le riz ne cuît pas correctement ou si la fonction de chauffage dysfonctionne, vérifiez le tableau ci-dessous. Si cela persiste, contactez le service client.

Problème	À vérifier	À effectuer
L'eau du riz déborde	• Avez-vous ajouté de l'eau au-delà de la limite indiquée ?	• Soulevez le couvercle et videz l'eau.
Le riz cuit est :	<ul style="list-style-type: none"> • Y a-t-il une quantité appropriée d'eau ? • Y a-t-il un corps étranger collé sous la cuve ou son fond est-il irrégulier ? • Trop mou 	<ul style="list-style-type: none"> • Ajustez le niveau d'eau en fonction des niveaux indiqués pour la quantité de riz. • Retirez toute substance étrangère. • Le couvercle a-t-il été ouvert avant que le voyant vapeur ne s'éteigne après le passage en mode chauffage ? • Y a-t-il eu une coupure de courant ou est-ce que le bouton de cuisson s'est éteint durant la cuisson ?
Le riz a brûlé et colle à la cuve.	<ul style="list-style-type: none"> • Le bouton de cuisson a-t-il été réenclenché de force après la fin de la cuisson et le passage en mode chauffage ? • Avez-vous cuit le riz sans avoir préalablement nettoyé les résidus de cuisson brûlés au fond de la cuve ? • Y avait-il des corps étrangers coincés entre la plaque chauffante et la cuve lors de la cuisson du riz ? 	<ul style="list-style-type: none"> • Rincez le riz soigneusement. • Une fois le riz cuit, NE TOUCHEZ PAS au bouton de cuisson. • Nettoyez soigneusement la cuve. • Nettoyez la plaque chauffante et la cuve afin qu'aucun corps étranger ne s'y accroche.

CONTENTS

Read all instructions before use.
Save these instructions for future reference.

CONTENTS

IMPORTANT SAFEGUARDS.....	3
HOW TO USE EXTENSION CORD	5
SPECIFICATIONS	5
CAUTION FOR SAFETY	6-7
NAME OF EACH PART.....	10
HOW TO USE	11
HOW TO MANIPULATE THE COOKER	12
CHECK BEFORE ASKING FOR SERVICE	13

Veuillez lire toutes les instructions avant utilisation.
Conservez ces instructions pour référence ultérieure.

SOMMAIRE

MESURES DE SÉCURITÉ IMPORTANTES	4
UTILISER LA RALLONGE ÉLECTRIQUE	5
CARACTÉRISTIQUES	5
PRÉCAUTIONS D'EMPLOI.....	8-9
NOM DES COMPOSANTS	10
MODE D'EMPLOI	14
COMMENT UTILISER LE CUISEUR	15
AVANT DE CONTACTER LE SERVICE CLIENT	16

CAUTION FOR SAFETY

• Carefully review the safety precautions to prevent accidents and/or harm.

- ⚠ Failure to take note may result in severe injury or death
- 🚫 Indicates a prohibition
- 💡 Indicates an instruction

⚠ Warning

🚫 Do not

Do not use in dusty areas or near flammable material
• Doing so may result in a fire or an explosion.
Do not use a damaged power cord, plug, or loose socket.

Do not insert foreign objects into the unit.
• Doing so may result in electric shock or fire.

Do not place near heat sources, like stoves or light.
• Doing so may result in electric shocks, fire, product malfunctions, and discoloration. Monitor the power cord and plug frequently.

Do not alter, disassemble, reassemble, or attempt repairs.
• Doing so may result in fire, electric shock, or injury.
• Contact the service center for repairs.

Do not use inner pots that are not designed for the cooker. Do not use without the designated inner pot.
• Doing so may result in electric shock or fire.

Do not spray cooker with insecticides or chemicals.
• Doing so may result in electric shock or fire.
• If cockroaches or insects get inside the cooker, contact the service center for help.

Use caution when steam is being released.
• Keep all body parts away from the pressure valve when the unit is operating.

This appliance is not intended for use by young children.
• Close supervision is needed when this appliance is used near children.

Do not repeatedly plug and unplug the power cord.
• Doing so may result in fire, electric shock, or injury.

Do not open the lid while the unit is operating.
• Doing so may result in burns.

Do not operate the unit if the power cord or plug has been damaged.
• Check the condition of the power cord frequently.
• Contact the service center if the power cord has been damaged.

Do not use near water sources or chemicals.
• Doing so may result in fire or conduct electricity.

Use a single socket with a current above 15A.
• Using a socket with several lines can cause overheating and fire.
• Use an extension cord with a current above 15A.

Do not modify the power cord under any circumstance.
• Improper modifications to the power cord can result in electric shock or fire.

Do not use a deformed Inner Pot or an Inner Pot other than the one exclusively for the product.
• Using another inner pot can cause an operation error or fire.

Do not put excessive force on the power cord.
Do not move or lift the product by pulling on the power cord.
• Doing so may cause the product to short, resulting in product damage and fire.

IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and / or injury to persons do not immerse cord, plugs, or the pressure cooker body in water or any other liquid.
4. Close supervision is necessary when this appliance is used by or near children.
5. This appliance is not intended for use by young children without supervision.
6. Unplug cord from outlet when not in use and before cleaning.
7. Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
9. Using accessory attachments not recommended by the manufacturer may cause fire, electric shock, or injury.
10. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
11. Do not use outdoors.
12. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas, electric burner, or in a heated oven.
14. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
15. Do not use this appliance for other than its intended use.
16. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
17. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
18. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
19. Do not use outdoors.
20. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
21. Do not place on or near a hot gas, electric burner, or in a heated oven.
22. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
23. Do not use this appliance for other than its intended use.
24. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
25. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
26. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
27. Do not use outdoors.
28. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
29. Do not place on or near a hot gas, electric burner, or in a heated oven.
30. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
31. Do not use this appliance for other than its intended use.
32. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
33. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
34. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
35. Do not use outdoors.
36. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
37. Do not place on or near a hot gas, electric burner, or in a heated oven.
38. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
39. Do not use this appliance for other than its intended use.
40. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
41. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
42. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
43. Do not use outdoors.
44. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
45. Do not place on or near a hot gas, electric burner, or in a heated oven.
46. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
47. Do not use this appliance for other than its intended use.
48. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
49. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
50. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
51. Do not use outdoors.
52. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
53. Do not place on or near a hot gas, electric burner, or in a heated oven.
54. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
55. Do not use this appliance for other than its intended use.
56. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
57. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
58. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
59. Do not use outdoors.
60. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
61. Do not place on or near a hot gas, electric burner, or in a heated oven.
62. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
63. Do not use this appliance for other than its intended use.
64. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
65. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
66. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
67. Do not use outdoors.
68. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
69. Do not place on or near a hot gas, electric burner, or in a heated oven.
70. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
71. Do not use this appliance for other than its intended use.
72. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
73. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
74. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
75. Do not use outdoors.
76. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
77. Do not place on or near a hot gas, electric burner, or in a heated oven.
78. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
79. Do not use this appliance for other than its intended use.
80. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
81. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
82. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
83. Do not use outdoors.
84. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
85. Do not place on or near a hot gas, electric burner, or in a heated oven.
86. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
87. Do not use this appliance for other than its intended use.
88. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
89. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
90. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
91. Do not use outdoors.
92. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
93. Do not place on or near a hot gas, electric burner, or in a heated oven.
94. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
95. Do not use this appliance for other than its intended use.
96. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
97. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
98. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
99. Do not use outdoors.
100. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
101. Do not place on or near a hot gas, electric burner, or in a heated oven.
102. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
103. Do not use this appliance for other than its intended use.
104. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
105. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
106. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
107. Do not use outdoors.
108. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
109. Do not place on or near a hot gas, electric burner, or in a heated oven.
110. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
111. Do not use this appliance for other than its intended use.
112. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
113. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
114. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
115. Do not use outdoors.
116. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
117. Do not place on or near a hot gas, electric burner, or in a heated oven.
118. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
119. Do not use this appliance for other than its intended use.
120. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
121. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
122. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
123. Do not use outdoors.
124. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
125. Do not place on or near a hot gas, electric burner, or in a heated oven.
126. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
127. Do not use this appliance for other than its intended use.
128. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
129. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
130. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
131. Do not use outdoors.
132. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
133. Do not place on or near a hot gas, electric burner, or in a heated oven.
134. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
135. Do not use this appliance for other than its intended use.
136. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
137. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
138. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
139. Do not use outdoors.
140. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
141. Do not place on or near a hot gas, electric burner, or in a heated oven.
142. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
143. Do not use this appliance for other than its intended use.
144. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
145. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
146. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
147. Do not use outdoors.
148. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
149. Do not place on or near a hot gas, electric burner, or in a heated oven.
150. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
151. Do not use this appliance for other than its intended use.
152. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
153. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
154. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
155. Do not use outdoors.
156. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
157. Do not place on or near a hot gas, electric burner, or in a heated oven.
158. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
159. Do not use this appliance for other than its intended use.
160. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
161. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
162. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
163. Do not use outdoors.
164. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
165. Do not place on or near a hot gas, electric burner, or in a heated oven.
166. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
167. Do not use this appliance for other than its intended use.
168. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
169. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
170. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
171. Do not use outdoors.
172. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
173. Do not place on or near a hot gas, electric burner, or in a heated oven.
174. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
175. Do not use this appliance for other than its intended use.
176. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
177. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
178. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
179. Do not use outdoors.
180. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
181. Do not place on or near a hot gas, electric burner, or in a heated oven.
182. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
183. Do not use this appliance for other than its intended use.
184. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
185. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
186. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
187. Do not use outdoors.
188. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
189. Do not place on or near a hot gas, electric burner, or in a heated oven.
190. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
191. Do not use this appliance for other than its intended use.
192. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
193. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
194. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
195. Do not use outdoors.
196. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
197. Do not place on or near a hot gas, electric burner, or in a heated oven.
198. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
199. Do not use this appliance for other than its intended use.
200. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
201. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
202. If fire occurs in the appliance, cover the fire with a lid or a damp cloth. Do not use water.
203. Do not use outdoors.
204. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
205. Do not place on or near a hot gas, electric burner, or in a heated oven.
206. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from