
CUCKOO IH PRESSURE
RICE COOKER

OPERATION INSTRUCTIONS

사용설명서

CRP-PHT06

1.08L(1~6 PERSON)

1.08L(1~6 인분)

CUCKOO



Scan for Recipe



CUCKOOELECTRONICS CO.,LTD.

CONTENTS

CONTENTS

BEFORE USING

Important Safeguards	3
Specifications	5
Safety Precautions	6~7
Name of Each Part	12
How to Clean	13~14
How to Care for the Product /	
How to Use the Lock/Unlock Handle	15

WHEN USING

Function / Error Code and Possible Cause	16
How to Select High Pressure Mode or Non-Pressure Mode	17
Voice Setting	18
How to Cook	19~20
How to Auto Clean	20
How to Open Cook	21
How to Preset Timer for Cooking/Reheating Function	22~23
Precautions for Preset Cooking/Reheating	24

BEFORE ASKING FOR SERVICE

Check Before Reporting a Malfunction	25~27
--	-------

COOKING GUIDE

Cooking Guide	60~63
---------------------	-------

목차

한국어 사용설명서

Important safeguards	3
제품규격	5
안전상의 경고	8~9
각 부분의 이름	28
제품 손질 방법 / 고장 시 압력배출 방법	29
제품 손질 방법 / 원터치버튼 조립방법	30
제품 손질 방법 / 뚜껑 결합 손잡이의 사용법에 관하여	31
기능 조작부의 이름과 역할 / 기능 표시부의 이상점검 기능	32
고압모드 또는 무압모드 선택 방법	33
현재시각의 설정 / 음성안내 기능의 설정과 해제	34
야간 음성볼륨 설정 기능 / 음성 설정 기능	35
취사 전 준비사항	36
맛있는 밥을 드시려면	37
취사는 이렇게 하십시오	38
취사 / 자동세척 기능은 이렇게 하십시오	39
쿠쿠 맞춤취사 기능은 이렇게 하십시오	40
찰현미는 이렇게 하십시오	41~42
멀티콕은 이렇게 하십시오	43
오픈 쿠킹(OPEN COOKING)은 이렇게 하십시오	44
스틸컷 오트밀은 이렇게 하십시오	45
냉동보관밥은 이렇게 하십시오	46
죽은 이렇게 하십시오	47
예약 취사는 이렇게 하십시오	48~49
예약 재가열은 이렇게 하십시오	50~51
취사후 보온 설정 및 해제	51
밥을 맛있게 보온하려면	52~54
절전 기능/화면 조명 절전 기능은 이렇게 하십시오	55
버튼 잠금기능 / 취사 잔여시간 표시기능은 이렇게 하십시오	56
고장신고 전에 확인하십시오	57~59

TABLE DES MATIÈRES

MANUEL D'UTILISATION FRANÇAIS

MESURES DE PROTECTION IMPORTANTES	4
Spécifications du produit	5
MESURES DE SÉCURITÉ	10~11

IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To prevent electric shock or injury, do not immerse the cord, plugs, or pressure components in water.
4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended for use by young children without supervision.
5. Unplug cord from outlet when not in use and before cleaning.
Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, and / or injury to persons.
8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas, electric burner, or in a heated oven.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, set all controls to "OFF," then remove the plug from the wall outlet.
13. Do not use this appliance for other than its intended use.
14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they pose a risk of fire or electric shock.
16. Fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
17. To reduce the risk of electric shock, cook only in the provided removable container.
18. This appliance cooks under pressure. Improper use may result in scalding injury.
Before operating the unit, properly secure and close the unit. See "Operating Instructions."
19. Do not cook foods such as applesauce, cranberries, cereals, macaroni, pasta, or other foaming foods. These foods tend to foam, froth, and sputter, and may block the pressure releasing device.
20. Before use always check the pressure releasing device for clogging.
21. Do not open the pressure cooker until the unit has cooled and internal pressure has been reduced.
See "Operating Instructions."
22. Do not use this pressure cooker to fry in oil.
23. Be sure that handles are assembled and fastened properly before each use. Cracked, broken or charred handles should be replaced.

SAVE THESE INSTRUCTIONS THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY ADDITIONAL IMPORTANT SAFEGUARDS

WARNING : This appliance generates heat and releases steam during use. Use proper precaution to prevent risk of burns, fires, other injuries, or damage to property.

1. Keep hands and face away from the Pressure Release Valve when releasing pressure.
2. Take extreme caution when opening the Lid after cooking. Severe burns can result from steam inside.
3. Never open the Lid while the unit is in operation.
4. Do not use without the inner pot in place.
5. Do not cover the Pressure Valve with anything as an explosion may occur.
6. Touch neither the inner pot nor any heating parts immediately after use.

Allow the unit to cool down completely first.

This appliance is intended to be used in household and similar applications such as :

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

MESURES DE PROTECTION IMPORTANTES

1. Lisez toutes les instructions avant d'utiliser cet appareil.
2. Ne touchez pas les surfaces chaudes. Utilisez les poignées ou les boutons.
3. Pour prévenir les risques d'incendie, les chocs électriques et/ou les blessures, ne plongez pas le cordon, les prises ou le corps autocuiseur dans l'eau ou tout autre liquide.
4. Une surveillance étroite est nécessaire quand cet appareil est utilisé par des enfants ou qu'il se situe à leur portée. Cet appareil n'est pas prévu pour être utilisé par de jeunes enfants sans surveillance.
5. Débranchez le cordon de la prise lorsque vous ne vous servez pas de l'appareil et avant de le nettoyer. Laissez l'appareil refroidir avant de remettre en place ou de retirer des pièces, et avant de le nettoyer.
6. N'utilisez aucun appareil si le cordon ou la fiche est endommagé, s'il ne fonctionne pas correctement ou s'il est endommagé de quelque façon que ce soit. Renvoyez l'appareil à un centre technique agréé le plus proche pour le faire examiner, réparer ou régler.
7. L'utilisation d'accessoires non recommandés par le fabricant peut causer un incendie, un choc électrique et/ou des blessures.
8. Si le cordon d'alimentation est endommagé, il doit être remplacé par un cordon ou ensemble prévu à cet effet, disponible auprès du fabricant ou de réparateurs agréés.
9. N'utilisez pas l'appareil à l'extérieur.
10. Ne laissez pas le cordon pendre d'une table ou d'un comptoir. Ne le laissez pas non plus en contact avec une surface chaude.
11. Ne placez pas l'appareil au-dessus ou près d'un brûleur à gaz, sur une plaque électrique ou dans un four chaud.
12. Branchez toujours la fiche sur l'appareil en premier, puis branchez le cordon dans la prise murale. Pour débrancher, ou désactiver toutes les commandes, retirez la fiche de la prise murale.
13. N'utilisez pas cet appareil à des fins autres que celles pour lesquelles il a été conçu.
14. Une prudence extrême est requise lorsque vous déplacez l'appareil contenant de l'huile chaude ou tout autre liquide chaud.
15. Des denrées alimentaires de taille excessive, les emballages sous feuille métallique, ou les ustensiles ne doivent pas être insérés dans l'appareil car ils constituent un risque d'incendie ou de choc électrique.
16. Un incendie peut se déclarer si l'appareil est couvert ou en contact avec des matériaux inflammables, y compris des rideaux ou des draperies, des murs, etc., durant son fonctionnement.
17. Afin de réduire le risque de choc électrique, faites cuire uniquement dans le récipient amovible fourni.
18. Cet appareil cuit sous pression. Un mauvais usage peut entraîner des brûlures. Avant d'utiliser l'appareil, mettez l'appareil bien en place et fermez-le. Reportez-vous à la section « Instructions d'utilisation ».
19. Ne cuisinez pas des aliments tels que compotes de pommes, canneberges, céréales, macaronis, spaghettis ou autres. Ces aliments ont tendance à mousser, écumer et à crépiter et peuvent obstruer le dispositif de relâchement de la pression.
20. Avant toute utilisation, vérifiez toujours si le dispositif de relâchement de la pression est obstrué.
21. N'ouvrez pas l'autocuiseur jusqu'à ce que l'appareil ait refroidi et que la pression interne ait diminué. Reportez-vous à la section « Instructions d'utilisation ».
22. N'utilisez pas cet autocuiseur pour faire frire dans de l'huile.

CONSERVEZ CES INSTRUCTIONS CET APPAREIL EST DESTINÉ À UN USAGE DOMESTIQUE UNIQUEMENT MESURES DE PROTECTION SUPPLÉMENTAIRES

AVERTISSEMENT : Cet appareil génère de la chaleur et libère de la vapeur durant son fonctionnement. Utilisez les protections appropriées pour prévenir le risque de brûlures, d'incendies, de blessures ou de dégâts matériels.

1. Gardez vos mains et votre visage à l'écart de la soupape de décharge lors du relâchement de la pression.
2. Faites extrêmement attention lors de l'ouverture du couvercle après la cuisson. La vapeur à l'intérieur peut provoquer des brûlures graves.
3. N'ouvrez jamais le couvercle lorsque l'appareil est en fonctionnement.
4. N'utilisez pas l'appareil sans la cuve de cuisson à sa place.
5. Ne recouvrez pas la soupape de pression par un objet quelconque, une explosion pourrait survenir.
6. Ne touchez pas la cuve de cuisson ni les éléments chauffants immédiatement après utilisation. Laissez tout d'abord l'appareil refroidir complètement. Cet appareil est prévu pour être utilisé à la maison à des fins telles que :
 - la cuisine pour le personnel dans des magasins, des bureaux et d'autres environnements de travail;
 - les fermes;
 - par des clients dans des hôtels, des motels et autres environnements de type résidentiel;
 - des environnements de type chambres d'hôtes.

HOW TO USE EXTENSION CORD / COMMENT UTILISER UNE RALLONGE

Note:

- A. A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a longer detachable power-supply cord or extension cord is used:
- (1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
 - (2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
 - (3) If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord

This appliance has a polarized plug : (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not properly fit in the outlet, turn the plug over.

If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way

Please, keep this safety feature.

Remarque:

- A. Un cordon d'alimentation court (ou détachable) vous est fourni pour réduire le risque de blessure personnelle en vous empêchant ou en trébuchant dans un cordon plus long.
- B. Des rallonges ou cordons détachables sont disponibles et peuvent être utilisés si manipulé avec précaution.
- C. En cas d'utilisation d'un cordon détachable ou d'une rallonge:
- (1) La puissance électrique indiquée sur la rallonge doit être au moins aussi élevée que la puissance de l'appareil
 - (2) La rallonge doit être disposée de manière à ne pas reposer sur le comptoir ou sur la table lorsqu'elle peut être tirée par un enfant.
 - (3) Si l'appareil est un modèle avec prise de terre, la rallonge doit être à trois conducteurs avec neutre.

Cet appareil est muni d'une prise polarisée (une lame est plus large que l'autre).

Par mesure de sécurité, ce cordon ne se branche dans une prise polarisée que d'une seule manière.

Si l'embout de l'appareil n'entre pas correctement dans la prise, inversez sa position.

Si le branchement de l'appareil n'est toujours pas possible, veuillez contacter un électricien qualifié. Ne tentez en AUCUNE façon de modifier l'embout électrique (la fiche) de l'appareil.

Veuillez respecter cette mesure de sécurité.

SPECIFICATIONS / SPÉCIFICATIONS / 제품규격

Model Name / NOM DU MODÈLE / 모델명		CRP-PHT06 FUZZY Series
Power Supply / Alimentation électrique / 정격전압		120V~(AC Only), 60Hz
Power Consumption / CONSUMMATION D'ENERGIE / 정격소비전력		COOK : 1090W, WARM 50W
Cooking Capacity/ CAPACITÉ DE CUISSON / 용량	HIGH-PRESSURE WHITE RICE(고압백미)	1~6cups
	STICKY MULTI GRAIN RICE(찰잡곡)	1~4cups
	NON-PRESSURE WHITE RICE(무압백미)	1~4cups
	HIGH-PRESSURE QUICK WHITE RICE(고압백미쾌속)	1~4cups
	QUICK STICKY MULTI GRAIN RICE(찰잡곡쾌속)	1~4cups
	STICKY BROWN RICE(찰현미)	1~4cups
	QUINOA(퀴노아)	1~4cups
	FROZEN STORED RICE(냉동보관밥)	1~4cups
	STEEL CUT OATS(스틸컷オート밀)	1~2cups
	PORRIDGE(죽)	1~1.5cups
Power Cord Length / LONGUEUR DU CORDON D'ALIMENTATION / 파워코드 길이		1.2m
Pressure / PRESSION / 조정장치 압력		98.0KPa(1.0kgf/cm ²)
Weight / POIDS / 중량		6.9KG
Cooking Capacity/ CAPACITÉ DE CUISSON / 용량	Width / LARGEUR / 폭	26.9cm
	Length / LONGUEUR / 길이	37.5cm
	Height / HAUTEUR / 높이	26.8cm

HOW SERVICE IS HANDLED / MISE EN OEUVRE DU SERVICE

USA

The East and the Central Districts
Tel. No. 718 888 9144
The West and the Central Districts
Tel. No. 323 780 8808

Canada

TORONTO
Tel. No. 905 707 8224
VANCOUVER
Tel. No. 604 540 1004

SAFETY PRECAUTIONS

- Read the following product safety guide carefully to prevent any accidents and/or serious danger.
- ‘Warning’ and ‘Caution’ are different as follows.

 Warning This means that the action it describes may result in death or severe injury.	 • This sign is intended to remind and alert that something may cause problems under the certain situation. • Please read and follow the instructions to avoid injury or damage.
 Caution This means that the action it describes may result in injury or property damage.	 • Indicates a prohibition  • Indicates an instruction

Warning **Do not**

Do not cover the automatic steam outlet or pressureweight with your hand or face.

- It can cause burns.
- Especially be careful to keep it out of children's reach.

Do not use the cooker near hot things such as stove, gas stove or direct ray of light.

- It can cause an electric shock, fire, deformation, malfunction, or discoloration. Please check the power cord and plug frequently.

Do not alter, reassemble, disassemble or repair.

- It can cause fire, electric shock or injury.
- For repair, contact dealer or the service center.

Use a single socket with the rated current above 15A.

- Using several plugs in one socket can cause overheating or fire.
- Use an extension cord with the rated current above 15A.
- Use AC 120V only.

Please pay careful attention against water and chemicals

- It can cause an electric shock or fire.

Do not use a rice cooker at a place where dust is trapped or chemical material is located.

- Do not use any combustible gas or flammable materials nearby a product.
- It can cause explosion or fire.

Do not use damaged power cord, plug, or loose socket.

- Please check the power cord frequently for damage.
- Serious damage can cause electric shock or fire.
- If the plug is damaged, contact the dealer or a service center.

Do not clean the product with water or pour water in the product.

- It can cause an electric shock or fire.
- If it contacts water, please separate power cord and contact dealer and service center.

Do not cover the automatic steam outlet or pressure weight with a duster, a towel, or apron, etc.

- It can cause deformation or a breakdown.
- It can cause an explosion by pressure.

Do not use pots that are not designed for the cooker. Do not use abnormal pot and do not use without the inner pot.

- It can cause an electric shock or fire.
- Depending on the model, the capacity, shape, material and water scale of the inner pot are different. When purchasing an inner pot, please check the model name of the product.

Do not bend, tie, or pull the power cord by force.

- It can cause an electric shock or short circuit resulting in fire.
- Please check the power cord and plug frequently.

Do not use it without the inner pot.

- It can cause electric shock or malfunction.
- Do not pour rice or water without the inner pot.
- If rice or water gets in then do not turn the product over or shake it, please contact the dealer or service center.

Do not turn the cover handle to “Non Pressure” while cooking.

- The hot steam or any hot content within the cooker can cause burns.
- After you finish the cooking do not try to open the cooker by force until the steam is completely exhausted.

Do not over unplug and plug the power cord over and over.

- It can cause an electric shock or fire.

Do not insert metal objects such as pins and wires or any other external substances in the automatic steam exhaust outlet or any other slot.

- It can cause an electric shock or fire.
- Especially be careful to keep it out of reach of children.

This device is not intended for use by people who lack physical, sensory, and mental abilities or lack the experience and knowledge to safely use the device without supervision or instruction, including children.

- Keep device out of reach of children.
- Device may cause electric shock, burns, etc

Don't spray or put any insecticides or chemicals.

- It can cause an electric shock or fire.
- If cockroaches or any insects get inside the cooker, please call a dealer or a service center.

Don't let foreign substances such as needle, cleaning pin, or metal get in or block the in let/out let pipe or gap.

- It can cause an electric shock or fire.
- Do not put a cleaning pin in a gap or a hole of the product except when clearing a steam outlet.

Do not open the LID while in heating and cooking. Never open the lid first, even if it boils over or the steam leaks.

- If you need to open the lid while cooking, press and hold the cancel button for 2 seconds, and make sure all internal steam has been released by turning the pressure weight over.

Remove a foreign substance on the cord and plug with a clean cloth.

- It can cause fire. Please check the power cord and plug frequently.

Be careful that the plug and power cord are not damaged by animal bites or sharp metal objects.

- Damages by impact can cause an electric shock or fire.
- Please check the power cord and plug frequently.

SAFETY PRECAUTIONS



Caution



Do not

Do not use it on a rice chest or a shelf.

- Do not place the power cord between furniture. It can cause an electric shock resulting in fire. Please check the power cord and plug frequently.
- When using on furniture be cautious of steam release As it can cause damage, fire and and/or electric shock.

Do not put heavy things on the power cord.

- It can cause an electric shock or fire.
- Please check the power cord and plug frequently

Do not change, extend or connect the power cord without the advice of a technical expert.

- It can cause an electric shock or fire.

Clean any dust or external substances off the temperature sensor and inner pot.

- It can cause a system malfunction or fire.

Do not plug or pull out the power cord with wet hands.

- It can cause an electric shock.

Please contact a dealer or service center when there is a strange smell or smoke.

- First pull out the power cord. And contact dealer or the service center.

Do not use over the maximum capacity.

- It can cause overflow or breakdown.
- Do not cook over stated capacity for cooking of chicken soup and congee.

Do not touch the metallic surface of the inner pot and pressure weight after cooking or warming.

- It can cause burns.
- Remaining hot steam can cause burns when you tilt the pressure weight while and right after the cooking.

Don't use the cooker near a magnetic field.

- It can cause burns or breakdown.

Do not drop the cooker.

- It can cause a safety problem.

Recommended detergent for inner pot cleaning (inside, outside)

Available	Unavailable
Cotton wool, Sponge wool, Microfiber, Mesh wool	Blue, Green scrubber (Abrasives material), Iron, Stain wool, Other metallic materials

- If you do not use a suitable scrubber for cleaning, the inner pot coating may be damaged and peeled off.

Use product on a flat surface. Do not use on a cushion.

- Please avoid using it on an unstable location prone to falling down.
- It can cause malfunction or a fire. Please check the power cord and plug frequently.

Don't use the inner pot for purposes other than its intended use.

- And do not heat up the inner pot on the gas stove.
- It can cause deformation of the inner pot.
- It can cause to spill the inner coating.

Please unplug when not in use.

- It can cause electric shocks or fire.

Please only use the cooker for its intended purpose.

- It can cause a malfunction or smell.

After you finish cooking, do not try to open the cooker by force until the steam is completely exhausted.

- The hot steam or any hot content within the cooker can cause burns.
- Cautiously open the top cover after cooking is done to avoid dangerous steam and burns.

Do not place on rough top or tilted top.

- It can cause burns or breakdowns.
- Be careful to install the power cord to pass without disruption.

Please call customer service if the inner pot coating peels off.

- Inner pot coating may wear away after long use.
- When cleaning the inner pot, do not use tough scrubber, metallic scrubber, brush, abrasive metallic etc.

Do not hold the cooker by the inner pot handle.

- It can cause problems and danger. There are portable handles on the bottom right and left side of the cooker. Hold the handles with both hands and move it carefully.

Always turn the cover handle to 'High Pressure' when not in use.

- Remaining pressure can cause deformation.

Wipe off any excessive water on the cooker after cooking.

- It can cause odor and discolouration.
- Wipe off water that is left behind from dew.

Do not move the product by pulling or using the power cord.

- Electric short might cause fire.

In case of a blackout or if the standby power blocking switch (TURN OFF) is activated during cooking, steam from the rice cooker will be released automatically. As a result, the quality of the rice may be lower than normal.

- Make sure that the standby power blocking switch is set to  (ON) before cooking.
- Please start cooking with an indicated amount of rice and water.
- Water can overflow if the amount of water in a pot exceeds the indicated level of water usage.
- Please start cooking when the steam control cap is completely installed.

Please clean the body and other parts after cooking.

- After cooking chicken soup, multi cook dishes, and etc., the smell may be absorbed.
- Clean the oven packing, top heater plate, and inner pot after cooking these dishes.
- Failure to clean may cause alteration or lingering smells.
- Use dry kitchen cleaner or sponge to clean the inner pot, since rough scrub or metallic ones are abrasive to the coating.
- Depending on the using methods or user's circumstances inner pot coating might rise. Please call the customer service for those cases.
- Please, do not pull out the clean steam vent by force.

Be cautious when steam is being released.

- When the steam is released don't be surprised.
- Please keep the cooker out of reach of children.

If possible, only use warming function when cooking white rice. Other foods are easily discoloured.

When you pull out the power plug, don't pull the power cord. Please, safely pull out the power plug.

- If the power cord is subjected to impact, it may cause an electric shock or fire.

안전상의 경고

- ‘안전상의 경고’는 제품을 안전하고 올바르게 사용하여 사고나 위험을 미리 막기 위한 것이므로 반드시 지켜 주십시오.
- ‘안전상의 경고’는 ‘경고’와 ‘주의’의 두가지로 구분되어 있으며 ‘경고’와 ‘주의’의 의미는 다음과 같습니다.

 경고	피하지 않을 경우 사망이나 중상을 초래할 수 있는 잠재적인 위험상황	 이 기호는 특정조건하에서 위험을 끼칠 우려가 있는 사항에 대하여 주의를 환기시키는 표시입니다.
 주의	피하지 않을 경우 경상을 초래할 수 있는 잠재적인 위험상황	 이 기호는 어떤 행위를 ‘금지’하는 표시입니다.
		 이 기호는 어떤 행위를 ‘지시’하는 표시입니다.

경고 (금지)

사용중 압력주 및 자동증기배출구에는 손과 얼굴을 가까이 하지 마십시오. • 화상의 우려가 있습니다. 취사중 나오는 증기는 매우 뜨거우므로 손이나 얼굴을 가까이 하지 마십시오. • 특히 어린이의 접근을 막아 주십시오.	변형된 내술이나 전용 내술이 아닌것은 사용하지 마십시오. • 내술이 가열되어 이상작동 및 화재의 원인이 됩니다. • 내술을 떨어뜨렸거나 변형된 경우에는 서비스센터로 문의해 주십시오. • 모델에 따라 내술의 용량, 형상, 재질, 무게가 다르므로 내술 추가 구매 시에는 제품의 모델명을 확인하여 주십시오.
제품을 직사광선이 쬐는 곳, 가스레인지, 라이터, 전열기구 등의 가까이에서 사용하지 마십시오. • 전기누전, 감전, 변형, 변색 및 화재의 원인이 됩니다. • 전원코드를 열기구 가까이 두지 마십시오. 코드피복이 녹아 화재, 감전의 원인이 됩니다. 수시로 전원코드의 상태를 꼭 확인하십시오.	내술 없이 사용을 하지 마십시오. • 감전 및 고장의 원인이 됩니다. • 내술이 없는 상태에서 썰이나 물을 넣지 마십시오. • 썰이나 물이 들어갔을 경우에는 제품을 뒤집거나 흔들지 마시고 서비스센터로 꼭 문의하십시오.
제품을 분해하거나 개조하지 마십시오. • 화재 및 감전의 원인이 됩니다. • 서비스기사 이외의 사람이 분해하거나 수리하지 마십시오. 수리 및 고장 상담은 서비스센터로 문의하여 주십시오.	취사나 요리가 진행중일 때 뚜껑 열림 버튼을 누르거나, 뚜껑 결합 손잡이를 절대 “ㄴ 무압”으로 돌리지 마십시오. • 강제로 열 경우 압력으로 인해 화상 및 폭발의 위험이 있습니다. • 취사나 요리 완료 후 증기가 완전히 배출된 상태에서 뚜껑 결합 손잡이를 작동시키십시오.
반드시 정격 15A이상의 교류 120V전용 콘센트에서만 사용해 주시고 한 콘센트에 여러 제품의 전원플러그를 동시에 꽂아 사용하지 마십시오. • 여러 제품과 함께 사용하거나, 다른 기구에 사용하면 발열 및 발화, 감전의 원인이 됩니다. 수시로 콘센트 상태를 꼭 확인하십시오. • 전원플러그에 이물질이나 물기가 묻어 있는 경우에는 잘 닦은 다음 사용하십시오. • 연장코드도 15A이상의 것을 사용하여 주십시오.	내술 없이 분리형 커버, 찜판, 금속성 물질 등을 넣거나, 넣어서 사용하지 마십시오. (특히, 어린이 주의). • 감전 및 화재의 원인이 됩니다.
싱크대, 욕육탕 등 제품에 물이 들어 갈 수 있는 곳이나, 눈을 맞을 수 있는 실외에서 사용하지 마십시오. • 전기 누전 및 감전의 위험이 있습니다. • 제품에 물이 들어 갔을 경우에는 서비스센터로 문의해 주십시오.	이 기기는 신체, 감각, 정신능력이 결여되어 있거나 경험과 지식이 부족하여 감속이나 지시 없이는 안전하게 기기를 사용할 수 없는 사람(어린이 포함)이 사용하도록 만들어지지 않았습니다. • 어린이가 기기를 가지고 놀지 않도록 주의하세요. • 감전, 화상 등 부상의 원인이 됩니다.
전원코드나 전원플러그가 파손되었거나 콘센트가 흔들릴 때는 사용을 중지하고, 서비스센터로 문의바랍니다. • 제품 사용 중 사용상의 부주의로 전원 코드의 피복이 벗겨지거나 찢힐 경우 화재 및 감전의 원인이 될 수 있으나, 수시로 전원코드와 전원플러그, 콘센트의 상태를 꼭 확인하십시오. • 전원코드나 전원플러그가 파손된 경우에는 위험이 생기지 않도록 하기 위하여 제조자나 그 판매점 또는 유자격 기술자(서비스 기사)에 의해 꼭 교환을 하십시오. • 반드시 지정된 서비스센터에서 수리하기 바랍니다.	제품내에 살충제나 화학물질 등을 뿌리거나 투입하지 마십시오. • 화재 발생의 우려가 있습니다. • 제품내 바퀴벌레나 벌레 등이 들어갔을 경우는 서비스센터로 문의해 주십시오.
제품을 싱크대에 넣고 닦거나 제품 내부에 물을 넣지 마십시오. • 전기 누전 및 감전, 화재의 원인이 됩니다. • 제품에 물이 들어간 경우에는 사용을 중지하고 전원플러그를 뽑은 다음 서비스센터로문의해 주십시오.	흡배기구 또는 틈 사이에 바늘, 청소용 핀, 금속물 등 이물질이 들어 가거나 막히지 않도록 하십시오. • 감전 및 화재의 원인이 됩니다. • 청소용 핀을 흡배출구 청소외에 제품의 틈새나 구멍에 넣지 마십시오.
압력주 및 자동증기배출구를 막거나 증기구에 행주나 장식용 덮개, 기타물건을 올린 채 사용하지 마십시오. • 압력에 의한 폭발의 위험이 있습니다. • 본체의 변형, 변색 및 고장의 원인이 됩니다.	취사나 요리가 진행중일 때 절대로 뚜껑을 열지 마십시오. • 요리 중 끓어 넘치거나 증기가 누설되더라도 절대로 먼저 뚜껑을 열지 마십시오. • 강제로 뚜껑을 열면 내용을 비산으로 화상의 우려가 있습니다. • 취사 또는 요리가 진행 중일때 부득이하게 뚜껑을 열어야 할 경우 취사 버튼을 약 0.3초간(내술온도가 높으면 1.5초간) 누른 후 내부 압력이 완전히 제거되었는지 확인을 하고 열어 주십시오. • 필요 시 제품의 사용을 중지하고 전원플러그를 뽑은 다음 고객센터로 문의하여 주십시오.
전원플러그에 묻은 이물질은 물기가 없는 천으로 깨끗이 제거하여 주십시오. • 화재의 원인이 됩니다. 수시로 전원 플러그 상태를 꼭 확인하십시오.	전원코드를 무리하게 구부리거나, 묶거나, 잡아당기지 마십시오. • 감전이나 쇼트로 인해 화재의 원인이 될 수 있습니다. • 수시로 전원코드 상태를 꼭 확인하십시오.
	전원플러그를 반복하여 뽑았다 꽂았다 하지 마십시오. • 감전 및 화재의 위험이 있습니다.
	플러그 및 전원 코드부를 동물이나 물에 젖거나 못과 같이 날카로운 금속 물체로부터 충격을 받지 않도록 주의하여 주십시오. • 충격으로 인한 파손은 합선, 감전, 화재 등의 원인이 됩니다. • 수시로전원코드와 전원 플러그 상태를 꼭 확인하십시오.

! 주의

⊘ (금지)

쌀통 및 다용도 선반 등에 제품을 놓고 사용하지 마십시오.

- 전원코드가 틈새에 눌려져 화재 및 감전의 원인이 됩니다.
- 수시로 전원코드 상태를 꼭 확인하십시오.
- 취사 또는 요리 중 증기가 배출될 때 쌀통 및 다용도 선반에 의해 제품의 손상, 화재, 감전의 원인이 됩니다.

전원코드 위에 무거운 물건을 올려 놓거나 코드가 제품바닥에 눌러지지 않도록 주의해 주십시오.

- 화재 및 감전의 원인이 됩니다. 수시로 전원코드 상태를 꼭 확인하십시오.

전원코드를 임의로 연장하거나 연결하는 등 가중하여 사용하지 마십시오.

- 감전 및 화재의 위험이 있습니다.

온도감지기, 밥솥 내부 및 열판 또는 내솥 바깥 부위의 이물질(밥알, 기타 음식물 등)은 반드시 제거 후 사용하십시오.

- 제품 사용 전 반드시 이물질 제거 상태 확인 후 사용하십시오.
- 온도감지를 정확히 못하게 되므로 내솥이 가열되어 이상작동 및 화재의 원인이 됩니다.

전원플러그를 콘센트에서 켜거나 뺄 때는 손의 물기를 반드시 제거한 후 전원플러그를 잡고 켜거나 빼어 주십시오.

- 젖은 손으로 전원플러그를 뽑으면 감전의 원인이 될 수 있습니다.
- 무리하게 당겨 뽑으면 전원코드에 이상이 발생되어 누전 및 감전이 될 수 있습니다.

제품 이동시 전원코드를 이용하여 들어올리거나 잡아당겨서 이동하지 마십시오.

- 소트로 인한 화재의 원인이 될 수 있습니다.

최대 용량 이상으로 내용물을 넣고 사용하지 마십시오.

- 밥솥 넘침이나 취사 불량 등 고장의 원인이 됩니다.
- 죽은 지정된 용량 이상은 사용하지 마십시오.

사용 중이거나 사용 직후에는 내솥, 내부, 열판 및 압력추 등은 뜨거운 것으로 만지지 마십시오.

- 고열에 의해 화상을 입을 수 있습니다.
- 압력추가 젖어서 증기에 의해 화상을 입을 수 있습니다.

뚜껑 위에 자성을 지닌 물체를 올려 놓거나 자성이 강한 물체 근처에서 사용하지 마십시오.

- 제품 고장 및 기능이 정상적으로 작동되지 않을 수 있습니다.

제품에 심한 충격을 주거나 떨어뜨리지 마십시오.

- 제품 고장 및 안전상의 문제가 발생할 수 있습니다.

내솥 세척용 권장 수세미(내측, 외측)

사용 가능	사용 불가능
면 수세미, 스폰지 수세미, 극세사, 망사 수세미	천색, 녹색 수세미(면마제 재질), 철, 스텐 수세미, 기타 금속성 재질 수세미

- 사용 불가능 수세미를 사용하실 경우 내솥 코팅이 손상되어 벗겨질 수 있습니다.

제품 밑에 깔판, 방석, 전기장판 등을 놓고 사용하지 마십시오.

- 화재 및 변형의 원인이 됩니다. 수시로 제품 상태를 꼭 확인하십시오.

취사, 보온, 지정된 메뉴 이외의 식재, 미역국, 카레, 기름으로 튀기는 요리 등 다른 용도로 사용하지 마십시오.

- 고장 및 냄새의 원인이 됩니다.

경사진 곳이나 울퉁불퉁한 곳에서는 사용하지 마십시오.

- 화상 및 제품 고장의 원인이 됩니다.
- 전원코드에 손이나 발, 기타 물체가 걸려 제품이 떨어지지 않도록 주의 하십시오.

전원플러그를 뽑을 때는 전원코드를 잡지마시고 꼭 전원플러그를 잡고 뽑아주십시오.

- 전원코드에 충격이 가면 감전 및 화재의 원인이 될 수 있습니다.

사용하지 않을 때는 전원플러그를 콘센트에서 뽑아 주십시오.

- 절연 성능 저하로 인해 감전, 누전, 화재의 원인이 될 수 있습니다.

내솥을 다른 용도로 사용하거나 불위에 올리지 마십시오.

- 내솥의 변형 및 코팅이 벗겨져 제품이 이상이 발생할 수 있습니다.

취사나 요리 완료 후 또는 보온시 뚜껑 결합 손잡이가 잘 돌리지 않았을 때 강제로 돌리지 마십시오.

- 화상 및 제품손상의 원인이 됩니다.
- 압력추를 젖혀 증기가 완전히 배출되었는지 확인 후 뚜껑 결합 손잡이를 돌려주십시오.
- 취사나 요리 완료 후 뚜껑을 열때 증기에 의한 화상의 우려가 있으므로 주의하십시오.

내솥 코팅이 벗겨질 경우 서비스센터로 문의해 주십시오.

- 제품을 장기간 사용할 경우 내솥 코팅이 벗겨질 수 있습니다.
- 거친 수세미나 금속성 수세미로 내솥을 씻을 경우 코팅이 벗겨질 수있으니 반드시 주방용 중성세제와 스폰지로 씻어 주십시오.
- 날카로운 식기류(포크, 숟가락, 젓가락 등)를 내솥에 넣은 채 씻을 경우 내솥 코팅이 벗겨질 수 있습니다.

뚜껑 결합 손잡이나 내솥 손잡이를 잡고 제품을 들어 올리지 마십시오.

- 뚜껑 결합 손잡이나 내솥 손잡이를 잡고 들어 올릴 경우 뚜껑이 열릴 우려가 있어 위험합니다.
- 제품 바닥 좌우측에 있는 홈을 양손으로 들어올려 안전하게 사용하십시오.

전원플러그를 뽑더라도 뚜껑 결합 손잡이를 항상 "고압" 위치로

- 취사나 요리 완료 후 내솥이 뜨겁거나 뜨거운 밥이 남아 있을 경우 전원 플러그를 뽑더라도 뚜껑을 닫고 뚜껑 결합 손잡이를 "고압" 위치로 돌리지 않으면 내부압력에 의해 제품의 변형이나 손상의 원인이 됩니다.
- 취사, 요리 및 보온 중에도 반드시 뚜껑 결합 손잡이를 "고압" 위치에 놓고 사용에 주십시오.

취사나 요리가 끝난 뒤에는 반드시 본체에 고인물을 닦아 주십시오.

- 냄새 및 변색의 원인이 됩니다.
- 본체의 물받이에 고인 물을 닦아 주십시오.

사용 중에 이상한 소리나 냄새 또는 연기가 나면 즉시 전원플러그를 뽑고 내부 압력을 완전히 제거후 서비스센터로 문의해 주십시오.

취사 또는 요리 진행 중 정전 또는 요리 진행 중 대기전력 차단 스위치가

(OFF)가 되면 자동증기 배출 장치가 작동하여 내용물 비산의 우려가 있습니다.

취사 전 대기전력 차단 스위치가 (ON)으로 되어 있는지 확인 후 취사해 주십시오.

- 정해진 밥 및 물의 양으로 취사해 주십시오.
- 특히, 물의 양이 규정보다 많으면 내용물 넘침의 원인이 됩니다.
- 증기조절캡이 장착된 상태에 취사해 주십시오.

요리 후에는 반드시 청소해 주십시오.

- 달걀, 감자편 등의 요리 후 취사 및 보온을 하게되면 밥에 냄새가 배어들 수도 있습니다.
- 내솥뚜껑 세척시 거친 수세미나 금속성 수세미를 사용할 경우 코팅이 벗겨질 수 있으니 반드시 스폰지 또는 물기를 제거한 행주로 닦아주십시오.
- 내솥, 내솥 뚜껑, 패킹 등을 깨끗이 닦아낸 후 사용하십시오.
- 제품의 사용환경이나 방법에 따라 내솥 뚜껑의 코팅이 벗겨질 수 있습니다. 이런 경우 서비스센터로 문의해 주십시오.

취사 또는 요리 진행 중 자동증기 배출시 주의하십시오.

- 증기가 고속으로 배출될때 '취익'하는 소리가 나므로 놀라지 않도록 주의하십시오.
- 특히 어린이의 접근을 막아 주십시오. 화상의 원인이 됩니다.

환반 이외의 식품에는 변질하기 쉬운 것(쌀밥, 혼식, 크로켓, 그라탕 등)이 있으므로 가능하면 보온하지 마십시오.

MESURES DE SÉCURITÉ

- Lisez attentivement le guide de sécurité du produit qui suit afin d'éviter les accidents et/ou les dangers graves.
- « Avertissement » et « Attention » diffèrent comme suit :

⚠ Avertissement Cela signifie que l'action qui est décrite peut entraîner la mort ou une blessure grave.	⚠ • Ce symbole vise à rappeler et à alerter que quelque chose peut entraîner des problèmes dans la situation donnée.
⚡ Attention Cela signifie que l'action décrite peut entraîner des blessures ou des dégâts matériels.	🚫 • Indique une interdiction ❗ • Indique une instruction.

⚠ Avertissement

🚫 Ne pas

Ne recouvrez pas la sortie de vapeur automatique ou le poids de pression avec votre main ou votre visage.

- Cela peut entraîner des brûlures.
- Faites particulièrement attention à le mettre hors de portée des enfants.

N'utilisez pas le cuiseur près de ce qui est chaud comme une cuisinière, une cuisinière à gaz ou la lumière directe du soleil.

- Cela peut causer un choc électrique, un incendie, une déformation, un dysfonctionnement ou une décoloration.
- Veuillez vérifier régulièrement le cordon d'alimentation et la prise.

Ne modifiez pas, ne remontez pas, ne démontez pas ou ne réparez pas cet appareil.

- Cela peut entraîner un incendie, un choc électrique ou des blessures.
- Pour le faire réparer, contactez le revendeur ou le centre technique.

Utilisez une prise individuelle avec un courant nominal supérieur à 15A.

- L'utilisation de plusieurs lignes sur une seule prise peut provoquer une surchauffe ou un incendie.
- Veuillez vérifier fréquemment le cordon d'alimentation et la prise.
- Utilisez une rallonge avec un courant nominal supérieur à 15A.

Soyez particulièrement attentifs à l'eau ou aux produits chimiques.

- Cela peut causer un choc électrique ou un incendie.

N'utilisez pas le cuiseur à riz dans un endroit qui retient la poussière ou en présence de produits chimiques

- N'utilisez aucun gaz inflammable ou produit inflammable près du produit.
- Cela peut entraîner une explosion ou un incendie.

N'utilisez pas un cordon d'alimentation endommagé, une fiche ou une prise mal fixée.

- Veuillez vérifier régulièrement si le cordon d'alimentation est endommagé.
- Des dégâts importants peuvent entraîner un choc électrique ou un incendie.
- Si la fiche est endommagée, contactez le revendeur ou un centre technique.

Ne nettoyez pas le produit avec de l'eau ni ne versez de l'eau dans le produit.

- Cela peut entraîner un choc électrique ou un incendie.
- Si le produit est en contact avec de l'eau, veuillez séparer le cordon d'alimentation et contactez le revendeur et le centre technique

Ne recouvrez pas la sortie de vapeur automatique ou le poids de pression avec un chiffon, une serviette ou un tablier etc.

- Cela peut entraîner une déformation ou une panne.
- Cela peut entraîner une explosion due à la pression.

N'utilisez pas de cuves de cuisson qui ne sont pas conçues pour le cuiseur.

N'utilisez pas une cuve de cuisson anormale et n'utilisez pas l'appareil sans la cuve de cuisson.

- Cela peut entraîner un choc électrique ou un incendie.

N'utilisez pas l'appareil sans la cuve de cuisson

- Cela peut provoquer un choc électrique ou un dysfonctionnement.
- Ne mettez pas de riz ni d'eau sans la cuve de cuisson à l'intérieur.
- Si du riz ou de l'eau s'infiltre, ne retournez pas le produit et ne le secouez pas, veuillez contacter le revendeur ou le centre technique

Ne pas appuyer sur le bouton de serrage ou ne pas tourner la poignée de verrouillage/déverrouillage en mode « Aucune pression » pendant la cuisson.

- Si l'appareil est ouvert de force, il peut provoquer des brûlures et une explosion.
- Utiliser la poignée de verrouillage/déverrouillage une fois que la vapeur est complètement épuisée.

Tournez la poignée de verrouillage/déverrouillage en position « haute pression » et ne fermez pas le couvercle avec la casserole interne à l'intérieur de la machine.

- La déformation ou l'endommagement de la serrure et de la casserole interne peut provoquer des fuites de vapeur ou une explosion.

N'insérez pas d'objets en métal tels que des épingles et des fils ou toute autre substance extérieure dans la sortie d'évacuation de vapeur automatique ou toute autre ouverture.

- Cela peut entraîner un choc électrique ou un incendie.
- Faites tout particulièrement attention de garder l'appareil hors de portée des enfants.

Gardez le cuiseur hors de portée des enfants.

- Cela peut provoquer des brûlures, un choc électrique ou des blessures.

Ne vaporisez pas et n'utilisez pas d'insecticides ou de produits chimiques.

- Cela peut entraîner un choc électrique ou un incendie.
- Si des cafards ou d'autres insectes pénètrent dans le cuiseur, veuillez contacter un revendeur ou un centre technique

Ne laissez pas des substances étrangères telles qu'une aiguille, une épingle de nettoyage, ou du métal entrer et ne bloquez pas le conduit d'arrivée/d'évacuation ou l'ouverture.

- Cela peut entraîner un choc électrique ou un incendie.
- Ne mettez pas une épingle de nettoyage dans l'ouverture ou le trou du produit sauf pour nettoyer la sortie de vapeur.

N'ouvrez pas le couvercle supérieur lors de la phase de chauffage et de la cuisson.

- Cela peut entraîner des brûlures.
- Si vous avez besoin d'ouvrir le couvercle lors de la cuisson, maintenez appuyé le bouton cancel (annuler) pendant deux secondes et vérifiez que la vapeur interne s'est complètement évacuée en retournant le poids de pression.

Ne pliez pas, n'attachez pas et ne tirez pas le cordon d'alimentation de force

- Cela peut provoquer un choc électrique ou un court-circuit entraînant un incendie. Veuillez vérifier fréquemment le cordon d'alimentation et la prise.

Ne débranchez pas ni ne branchez sans arrêt le cordon d'alimentation.

- Cela peut entraîner un choc électrique ou un incendie

Faites attention à ce que la fiche et le cordon d'alimentation ne soient pas entrecroqués par des attaques d'animaux ou par des matériaux métalliques tranchants.

- Les dégâts dus à des impacts peuvent provoquer un choc électrique ou un incendie. Veuillez vérifier fréquemment le cordon d'alimentation et la prise.

Retirez une substance étrangère sur le cordon et la fiche à l'aide d'un chiffon propre.

- Cela peut provoquer un incendie. Veuillez vérifier fréquemment le cordon d'alimentation et la fiche.

⚠ Avertissement

📞 Se rappeler

- N'utilisez pas l'appareil sur un coffre à riz ou une étagère
- Ne placez pas le cordon d'alimentation entre des meubles. Cela peut provoquer un choc électrique entraînant un incendie.
- En cas d'utilisation sur du mobilier, faites attention à l'évacuation de la vapeur car cela peut provoquer des dégâts, un incendie et/ou un choc électrique.
- Ne placez pas de choses lourdes sur le cordon d'alimentation
- Cela peut entraîner un choc électrique ou un incendie.
- Veuillez vérifier fréquemment le cordon d'alimentation et la fiche.
- Ne changez pas, ne rallongez pas ni ne branchez le cordon d'alimentation sans l'avis d'un expert technique.
- Cela peut entraîner un choc électrique ou un incendie.

- Nettoyez la poussière ou toute substance étrangère sur le capteur de température et la cuve de cuisson.
- Cela peut provoquer un dysfonctionnement du système ou un incendie
- Ne branchez pas et ne retirez pas le cordon d'alimentation avec les mains mouillées.
- Cela peut provoquer un choc électrique
- Ne déplacez pas le produit en tirant ou en utilisant le cordon d'alimentation.
- Un court-circuit électrique pourrait provoquer un incendie.

⚠ Attention

📞 Se rappeler

- Tournez la poignée de verrouillage/déverrouillage à la position « Haute pression » lorsque l'appareil est débranché.
- La pression interne dû à la cuisson du riz ou à la casserole interne peut provoquer des déformations ou des dommages, si la poignée de verrouillage/déverrouillage n'est pas en position « verrouillée ».
- Assurez-vous de verrouiller la poignée de verrouillage/déverrouillage pendant la cuisson et le réchauffement à haute pression.
- Essayez toute l'eau en excès sur le cuiseur après la cuisson.
- Cela peut entraîner des odeurs ou une décoloration. Essayez l'eau résultant de la condensation.
- Veuillez contacter un revendeur ou un centre technique lorsqu'un bouton du produit ou le produit lui-même ne fonctionne pas correctement.
- En cas de coupure de courant durant la cuisson, la vapeur du cuiseur à riz est évacuée automatiquement. La qualité du riz est par conséquent intérieure à la normale.
- Veuillez démarrer la cuisson avec la quantité d'eau et de riz indiquée.
- L'eau peut déborder si la quantité d'eau dans la cuve de cuisson dépasse le niveau d'eau recommandé.
- Veuillez démarrer la cuisson avec le capot de régulation de la vapeur complètement mis en place.
- Lorsque vous cuisinez des aliments avec des os, comme des côtes levées braisées, veuillez assaisonner la viande dans une autre assiette.
- Le revêtement de la casserole interne peut s'user.
- Si le revêtement de la casserole interne s'égraine ou s'use à cause d'une erreur du client, vous devrez payer la réparation même pendant la période de service de réparation gratuite.

- Veuillez nettoyer le corps ainsi que les autres parties après la cuisson.
- Après avoir fait cuire de la soupe ou poulet, différents plats etc. il se peut que l'odeur soit imprégnée.
- Nettoyez le compartiment du four, la plaque supérieure de chauffage et la cuve de cuisson à chaque fois que vous faites cuire avec l'un d'entre eux.
- Cela peut entraîner une altération ou des odeurs.
- Utilisez un essuie-tout sec ou une éponge pour nettoyer la cuve de cuisson, car les surfaces dures rugueuses ou celles en métal sont abrasives pour le revêtement.
- En fonction des méthodes d'utilisation ou des circonstances propres à l'utilisateur, le revêtement de la cuve de cuisson peut se détacher.
- Veuillez contacter le service client dans des cas de figure. Veuillez ne pas tirer de force l'évent à vapeur propre.
- Faites attention lorsque la vapeur est évacuée
- Ne soyez pas surpris lorsque la vapeur est évacuée.
- Veuillez conserver le cuiseur hors de portée des enfants.
- N'utilisez si possible la fonction de chauffage que pour la cuisson de riz blanc. Les autres aliments se décolorent facilement
- Lorsque vous retirez la fiche d'alimentation, ne tirez pas sur le cordon d'alimentation. Veuillez retirer en toute sécurité la fiche d'alimentation
- Si vous faites prendre un impact au cordon d'alimentation, cela peut entraîner un choc électrique ou un incendie.
- Veuillez rincer le riz et le placer dans une autre assiette et ne frappez pas sur la casserole interne pour retirer le reste de riz dans l'assiette.
- Si le revêtement de la casserole interne s'égraine ou s'use à cause d'une erreur du client, vous devrez payer la réparation même pendant la période de service de réparation gratuite.

⚠ Attention


🚫 Ne pas

- Ne pas utiliser la casserole interne à des fins diverses. Et ne pas chauffer la casserole interne sur une cuisinière à gaz.
 - Cela peut entraîner une déformation de la casserole interne.
 - Cela peut entraîner le déversement du revêtement intérieur.
 - Veuillez contacter le service client si le revêtement de la cuve de cuisson s'enlève.
 - Il se peut que le revêtement s'use après une longue utilisation.
 - Lors du nettoyage de la cuve de cuisson, n'utilisez pas de tampon à récurer dur ou métallique, de brosse, d'abrasifs métalliques etc.
 - Type de laveur recommandé pour nettoyer la casserole interne (intérieur, extérieur)
- | Disponible | Non disponible |
|---|---|
| Eponge en coton, éponge, récureur, récureur à fillet, de type extra fin | laveur bleu, vert, de type abrasif, éponge en acier inoxydable, autre récureur métallique |
- Si vous utilisez une éponge non mentionnée, le revêtement de la casserole interne peut s'user.
 - Si le revêtement de la casserole interne s'égraine ou s'use à cause d'une erreur du client, vous devrez payer la réparation même pendant la période de service de réparation gratuite.
 - Ne placez pas l'appareil sur une surface irrégulière ou inclinée.
 - Cela peut provoquer des brûlures ou des pannes.
 - Faites attention à installer le cordon d'alimentation de façon à ce qu'il passe sans interruption.
 - Veuillez contacter un revendeur ou un centre technique en cas d'odeur ou de fumée inhabituelle.
 - Débranchez tout d'abord le cordon d'alimentation.
 - Puis contactez le revendeur ou le centre technique.
 - N'utilisez pas l'appareil au-delà de la capacité maximum.
 - Cela peut provoquer un débordement ou une panne.
 - Ne faites pas cuire au-delà de la capacité mentionnée pour la cuisson d'une soupe au poulet et d'un congee
 - N'utilisez pas le cuiseur près d'un champ magnétique.
 - Cela peut provoquer des brûlures ou une panne
 - Ne laissez pas tomber le cuiseur et ne le soumettez pas à des chocs.
 - Cela peut entraîner un problème de sécurité


- Après avoir fini la cuisson, n'essayez pas d'ouvrir le cuiseur de force avant que la vapeur ne soit complètement évacuée.
- La vapeur chaude ou tout autre élément chaud à l'intérieur du cuiseur peut provoquer des brûlures.
- Ouvrez le couvercle supérieur avec prudence après la cuisson afin d'éviter la vapeur et des brûlures présentant un danger.
- Ne mettez pas le riz dans une assiette en utilisant une cuillère métallique ou une cuillère à riz au lieu d'une cuillère à riz en plastique ou en bois.
- Cela peut endommager la surface de la casserole interne et le revêtement peut s'user.
- Si le revêtement de la casserole interne s'égraine ou s'use à cause d'une erreur du client, vous devrez payer la réparation même pendant la période de service de réparation gratuite.
- Ne touchez pas la surface métallique de la cuve de cuisson et le poids de pression après la cuisson et la phase de chauffage.
- Cela peut entraîner des brûlures.
- La vapeur chaude restante peut provoquer des brûlures quand vous appuyez sur le poids de pression durant et juste après la cuisson.
- Ne tenez pas le cuiseur par la poignée de la cuve de cuisson
- Cela peut entraîner des problèmes ou être dangereux. Des poignées amovibles sont disposées en bas à droite et sur le côté gauche du cuiseur. Tenez les poignées à deux mains et déplacez-le avec précaution.
- Utilisez seulement une tension alternative de 120 V.
- Autrement, cela peut provoquer un choc électrique ou un incendie.
- Cela peut provoquer des dysfonctionnements.
- Utilisez le produit sur une surface plane. N'utilisez pas le produit sur un coussin. Veuillez éviter d'utiliser le produit dans un endroit qui n'est pas stable ou il risquerait de tomber
- Cela peut entraîner un dysfonctionnement ou un incendie. Veuillez vérifier fréquemment le cordon d'alimentation et la prise.
- Ne pas dépasser la quantité indiquée pendant la cuisson.
- Si vous dépassez la quantité d'aliment indiquée dans la recette, cela peut causer un débordement en raison du poids de pression et du couvercle léger.
- Veuillez utiliser le cuiseur dans le but dans lequel il a été conçu.
- Cela peut provoquer un dysfonctionnement ou une odeur.
- Veuillez débrancher la prise lorsque vous n'utilisez pas le produit
- Cela peut provoquer des chocs électriques ou un incendie.

NAME OF EACH PART


NAME OF EACH PART

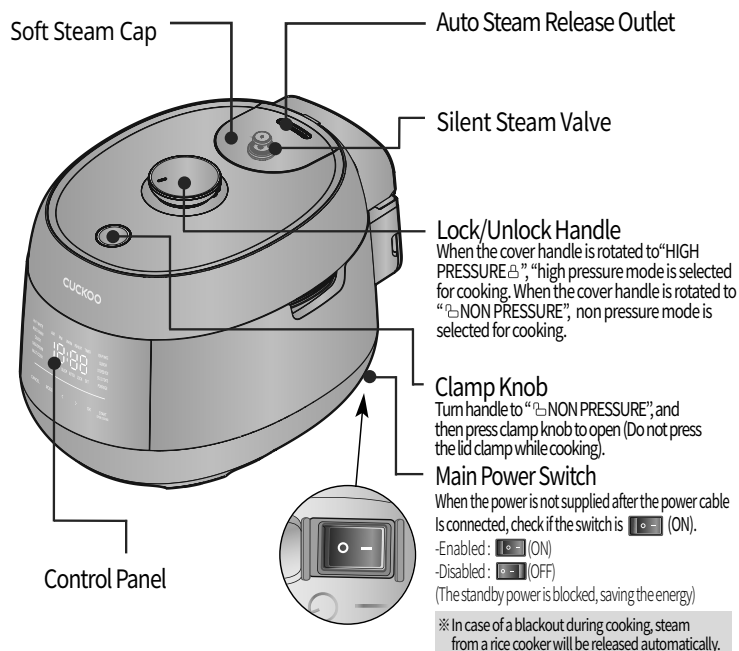


NAME OF EACH PART

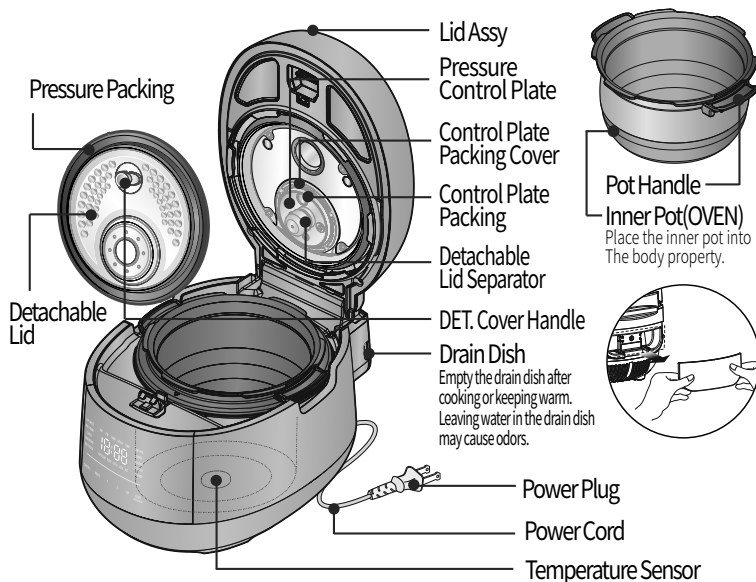

Accessories

 

Manual

 


Cooking Guide



Rice Scoop



 Rice Measuring Cup



Steam Plate



ALL STS Inner Pot
(All stainless steel inner pot can be purchased separately.)




Cleaning Pin
(Attached on the bottom of the unit)

- Always allow the cooker to completely cool before removing any parts or cleaning.
- Clean the body of rice cooker and the cover with a dry towel. Do not use benzene or thinner to clean the rice cooker. The layer of starch, which is the residue from rice cooking, may appear on the detachable cover or inside of rice cooker. This layer does not cause any health risk.
- Do not put materials like screws into holes of detachable cover. Check the back cover and front cover.


Detachable cover & Pressure packing

After cleaning detachable cover, put it back on the lid
Unless detachable cover is mounted, preset cooking cannot be done. (Alarm may sound while keeping warm.)

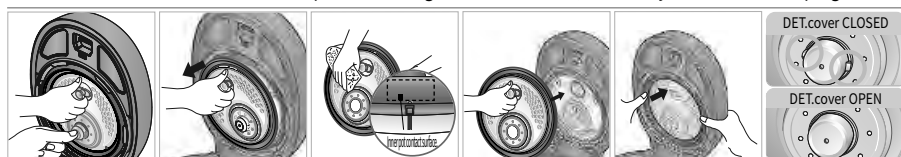

- ① Hold handle, press the center button, and pull in the direction of the arrow.
- ② Wash the detachable cover with a mild dish detergent. Afterwards, remove all excess moisture.
- ③ When you mount the Detachable Cover, hold the handle of the Detachable Cover, attach it to the Cover, and push the bottom end of the Detachable Cover until you hear a clicking sound.

Please fit a rubber packing into the cover plate completely after washing or replacing the rubber packing.

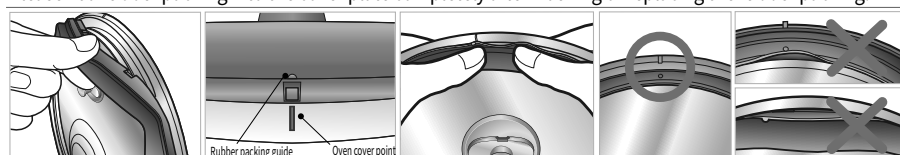


- ① To separate the rubber packing, please pull it out from the cover plate as shown in the picture.
- ② To put back the rubber packing, please fit it to each of 6 projections and holes as shown in the picture.
- ③ After fitting 6 projections to the holes, please press the rubber packing around the corner completely as shown in the picture.
- ④ Please check that the rubber packing fits into the cover plate completely. If not, steam may be released from the crack between the packing and the plate.



Safety Packing


Make sure to clean the steam vent before and after use. Do not try to pull out the clean steam vent and safety packing, clean it with care. Make sure the clean steam vent and safety packing are installed completely after/before use. If the steam vent is detached, or not attached completely, please contact customer service.

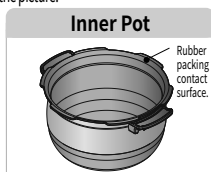

Inner Pot

Wipe the water on the outside and bottom of the Inner Pot. A rough sponge, a brush or an abrasive can cause scratches on the coating. Use a dishwashing liquid and a soft cloth or a sponge.


※ Keeping the contact area of the Inner Pot with the pressure packing always clean, increases the product's durability.

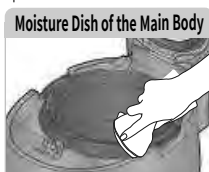

Moisture Dish of the Main Body

Wipe the main unit with a wet cloth that has been extracted out of all water.

※ Caution
Do not clean the inner pot with any sharp cutlery inside (fork, spoon, chopsticks, etc.).
- The coating of the inner pot may peel off.

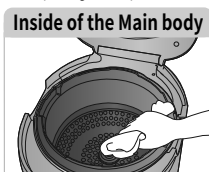


Inside of the Main body

Make sure to clean the steam control vent before and after use.

How to Release Pressure in Case of Malfunction

- If the pressure is not released after cooking is complete and the Lock/Unlock Handle cannot be turned, please disconnect the power and release the pressure as follows:
- Use a tool such as chopsticks to pull in the direction of the arrow to release the pressure. (To avoid burns, please wear rubber gloves when releasing the pressure.)
- If the appliance does not operate after attempting to disconnect and reconnect the power three times, please contact the Cuckoo Customer Service Center.

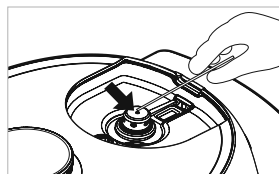


HOW TO CLEAN

How to Clean the Pressure Weight Nozzle

If the valve of the pressure part is clogged, puncture it with the cleaning pin

• The valve hole of the pressure weight allows steam to release. Check regularly to ensure that it is not blocked. If the valve hole of the pressure weight is blocked, the hot steam and hot content within the cooker can cause serious injury. ※ Do not use the cleaning pin for any other use except to clean the valve hole of the pressure weight.

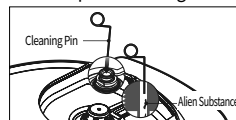

How to disassemble the pressure weight

 
- ▶ When the handle is in the 'Lock' position, turn the pressure weight counter-clockwise while pulling it up, and pull it out.
- ▶ Puncture the clogged valve hole with the cleaning pin and reassemble it by turning it clockwise.
- ▶ When the pressure weight is properly assembled, it can freely be turned.

How to clean the soft steam cap

Do not touch the surface of the soft steam cap right after cooking. You can get burned.



- ❶ Detach the soft steam cap like the picture.



- ❷ Press the hooks in the front in direction of arrow to detach the bottom case. Clean the parts frequently with sponge or a neutral detergent.
※ Before reassembling the packing with the bottom case, please make sure to put the packing into the packing groove.
※ In order to separate the steam cap into parts, please pull bottom part downward by pressing the extrusion parts on both sides.



- ❸ Before reattaching the parts, fit the bottom case into the groove of steam cap perfectly. Press the hooks in direction of arrow to assemble the parts together.



- ❹ After attaching the soft steam cap on the lid as shown in above picture, press the cap firmly to assemble the cap into the product.

How to clean dew dish



- ❶ Separate dew dish

 


- ❷ Clean the dew dish with A neutral detergent.



- ❸ Securely put in the dew dish after cleaning.

How to maintain the Silent Steam Valve Cap




- ❶ If the hole in the silent steam valve cap is blocked by foreign matter, use the cleaning pin (attached to the bottom of the main unit) to clear the hole, then wash the surface with a neutral kitchen detergent and a sponge.



- ❷ If the Silent Steam Valve Cap becomes discolored, boil it in water with added citric acid until the discoloration disappears.

How to Assemble the One-Touch Button



- If the one-touch cover has been disassembled, please reassemble it as shown below.
- If any parts are lost or damaged, please reach out to the customer service center.

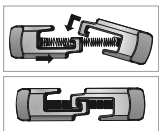

- ❶ Assemble the parts of the one-touch button as shown in the picture above.




- ❷ Push the one-touch button assembled in picture 1 into the square groove of the lid and secure it.
※ Be sure to pay attention to the direction of the stopper on the one-touch button when assembling

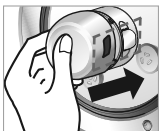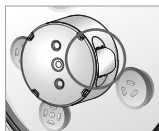

- ❸ Align the groove and stopper of the one-touch button cover in the correct direction and push until you hear a "click" sound.



In Case of Improper Assembly of the One-Touch Button

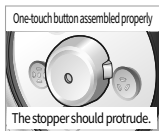

One-touch button assembled properly

The stopper should protrude.

- ❹ Please check if the one-touch button is properly assembled as shown in the picture above.
- ❺ Press the one-touch button to verify that it operates correctly.



※ Pay attention to the up and down direction of the stopper




normal




Abnormal

<One-touch components>

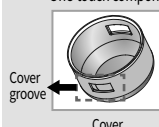

Cover groove

Cover

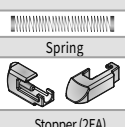

Spring

Stopper (2EA)

HOW TO CARE FOR THE PRODUCT / HOW TO USE THE LOCK/UNLOCK HANDLE

If rice or food sticks to the all-stainless inner pot

If residue is stuck to the inner pot, please refer to the cleaning instructions below and use them as described for easier cleaning.

- 1 After cooking is finished, use a rice paddle or similar utensil to scrape off any residue stuck to the inner pot.
- 2 Pour water into the inner pot up to the white rice water level 2, close the lid, and turn the lid locking handle to the "□ No Pressure" position.
- 3 Use the arrow buttons to select the "Porridge" menu, then press the confirm button.
- 4 Use the arrow buttons to set the time to 25 minutes, then press the start button.

※ If rice or food is stuck to the inner pot, soak it in warm water for more than 30 minutes before cleaning, or use the "Porridge" function to make cleaning easier.
 ※ Using the automatic cleaning menus to soak the inner pot may cause residual steam to block the steam outlets due to heating of the inner pot. Therefore, when soaking the inner pot, be sure to use only the "Porridge" menu.
 ※ When the Scorched Rice/Porridge menu finishes, the inner pot will be hot, please be careful for your safety.

ALL STAINLESS Inner Pot Cleaning and Care Instructions (Be sure to clean before first use after purchase.)

To remove impurities and stains and ensure long-lasting use, follow the instructions below for optimal cleanliness. When using the product for the first time, fine particles (abrasives) may come off the inner pot surface. Before use, thoroughly clean the inner pot using the method below until no abrasive residue or dust remains.

- 1 Add 10g of citric acid or baking soda (adjust the amount depending on the level of stains) and fill the inner pot with water up to the auto-cleaning mark line. Close the lid and set the lid handle to "High Pressure □" or "□ No Pressure."
 ※ You may substitute vinegar (1/3 paper cup) for citric acid or baking soda.
- 2 While in standby mode, press the Mode button to select Auto-Clean, then press the Start button.
 ※ Press and hold the Mode button for at least 0.3 seconds to enter the mode.
 ※ Each time you press the Mode button, the selection moves one step forward.
 ※ For instructions on using the Auto-Clean function, refer to page 19.
- 3 After the automatic cleaning is finished, rinse with lukewarm water using a neutral detergent.
 ※ Be cautious of burns, as the inner pot may be hot after auto-cleaning.
- 4 Wipe away all moisture with a dry towel and let the inner pot dry completely.
 ※ If any polishing agent or residue remains, please repeat steps 1 to 4 until clean.

※ Notes on stainless steel care

- Slight discoloration or rainbow-like stains may appear on the stainless inner pot due to minerals in the food during cooking. This is a normal occurrence and not a product defect. (Rainbow-colored stains that appear on the STAINLESS inner pot during cooking are a natural phenomenon. They are completely harmless to the human body, so you can use the product with confidence.)
- Leaving salt water or acidic solutions in the stainless inner pot for extended periods may cause discoloration.
- Do not clean or wipe stainless steel parts with bleach or chlorine-based detergents.
- For water scale or rainbow-colored stains, using a sufficient amount of vinegar or lemon juice can help remove them.

Recommended scrubbers for cleaning the inner pot (inside and outside)

Usable	Cotton scrubber, sponge scrubber, microfiber, mesh scrubber	※ Using non-recommended scrubbers may damage the inner pot or erase water level markings.
Not usable	Blue or green abrasive scrubbers, steel or stainless steel scrubbers, and other metal-based scrubbers	

How to use the handle


1. Make sure to close the lid and turn the Lock/Unlock handle to "NON PRESSURE" or "HIGH PRESSURE" while cooking.
 • You can select cooking with high pressure when you turn the handle to "HIGH PRESSURE". This is the function of safety device which indicates that the cooker is properly locked, and cooking with high pressure is available.
 • If you turn the handle to "NON PRESSURE" you can choose to cook without pressure or select cooking.
 Then "NON PRESSURE" signal is displayed on the Display.
 • If "HIGH PRESSURE" or "NON PRESSURE" does not appear on the Display, Preset/Auto Clean button does not work.
2. When cooking with high pressure is done, turn the Lock/Unlock handle from "HIGH PRESSURE" to "NON PRESSURE", and then open up the lid with "Unlock" button.
 • If steam is not completely exhausted after cooking, the handle might not be easily turned from "HIGH PRESSURE" to "NON PRESSURE". In such a case, allow remaining steam to escape by tilting the Pressure weight.
3. Make sure that the Lock/Unlock handle is completely turned to "NON PRESSURE" when opening and closing the lid.

high pressure non pressure




FUNCTION / ERROR CODE AND POSSIBLE CAUSE

FUNCTION

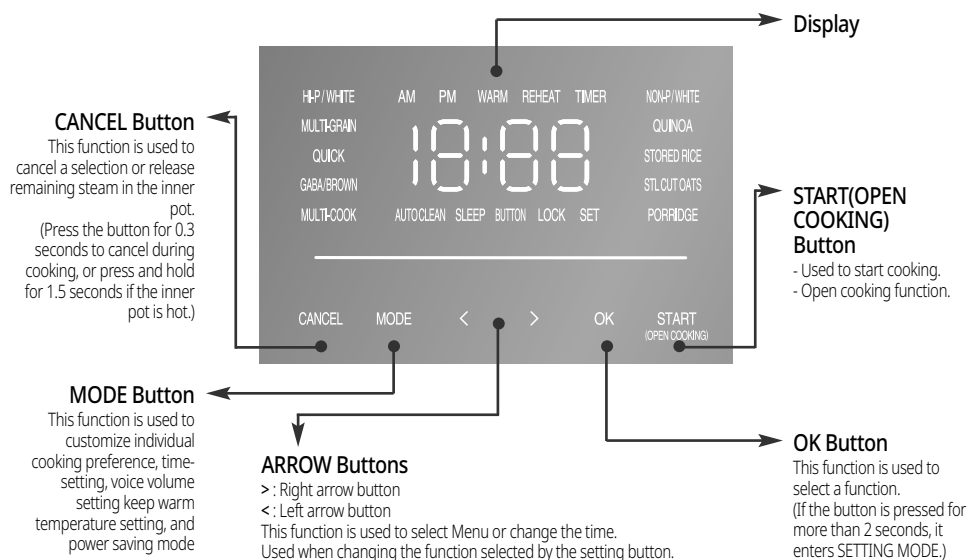

- ※ When you see an image like one in the right side on your display, it means the rice cooker is in 'stand-by' mode.
- ※ Press 'Cancel' button to enter the 'stand-by' mode.
- ※ Press the button until you hear the buzzer sound. The image of the plate may differ.
- ※ To start cooking, make sure to select a menu using the arrow buttons before pressing the START button. (Cooking will not begin if you press the START button immediately while in standby mode.)

 

Error Code and Possible Cause

If the product malfunctions or is used incorrectly, refer to the following indicators.

If the error continues to appear under normal usage or after following the recommended steps, please contact customer service for assistance.

	When the inner pot is not placed into the unit.		Fan monitor error. ("E.F" mark blink.)	
			Temperature sensor error. ("E.." mark, "E.P" mark, "E.L" mark blink.)	
	This error code is shown when power is disconnected for 10 minutes while cooking. Press "Cancel" button to reset to Stand-by mode.		Displayed when preset time exceeds 13 hours. Set the preset time within 13 hours.	
	Displayed when ARROW buttons are pressed without the Lock/Unlock handle securely set to "High Pressure" or "Non Pressure." Firmly adjust the handle to the correct position.			
	This error code is displayed when the smart locking system has failed.			
	Displayed when the smart locking system fails. Do not open the lid until cooking is fully complete. If the error occurs during the warming or standby mode, turn off the power before opening the lid. For further assistance, please contact the service center.			
	Displayed if "START" is pressed again or cooking is complete without ever turning the handle to "NON PRESSURE." Turn the handle to "NON PRESSURE," then back to "HIGH PRESSURE" to resolve.			
	Micom power error:		Micom memory error.	
	Error occurs if "PRESSURE COOK" or "KEEP WARM/REHEAT" is pressed without the detachable lid attached. Attach the lid to resolve. Warming or reheating will not function until resolved.			
		This error indicates a power system check for issues.		Environment sensor error.

HOW TO SELECT HIGH PRESSURE MODE OR NON PRESSURE MODE

High Pressure Mode

Turn the cover handle to “HIGH PRESSURE 凸”.

- ▶ The LED on the cover handle lights up orange.
- ▶ In high pressure mode, you can select only the high pressure menu options.
- ▶ HIGH PRESSURE MENU : Hi-Pressure White Rice, Hi-Pressure Quick White Rice, Sticky Multi-Grain Rice, Quick Sticky Multi-Grain Rice, Sticky Brown Rice, Multi-Cook

1 If you want to change the pressure mode from non pressure mode to high pressure mode, turn the cover handle from “凸 NON PRESSURE” to “HIGH PRESSURE 凸”.

- ▶ When the pressure mode is turned from non pressure mode to high pressure mode, only the high pressure menu options will flash for three seconds.
- ▶ The LED on the cover handle lights up orange.
- ▶ To start cooking, you must first select a menu using the arrow buttons, then press the START button.
(Cooking will not begin if you press the START button immediately while in standby mode.)

<Screen on standby
(NON PRESSURE MODE)>



When
changing
into the high
pressure
mode



After high
pressure
menus flash
for 3 seconds

<Screen on standby
(HIGH PRESSURE MODE)>



NON Pressure Mode

Turn the cover handle to “凸 NON PRESSURE”.

- ▶ The LED on the cover handle lights up white.
- ▶ In high pressure mode, you can select only the non pressure menu options.
- ▶ HIGH PRESSURE MENU : Non-Pressure White Rice, Quinoa, Frozen Stored Rice, Steel Cut Oats, Porridge

1 If you want to change the pressure mode from high pressure mode to non pressure mode, turn the cover handle from “HIGH PRESSURE 凸” to “凸 NON PRESSURE”.

- ▶ When the pressure mode is turned from high pressure mode to non pressure mode, only the non pressure menu options will flash for three seconds
- ▶ The LED on the cover handle lights up white.
- ▶ To start cooking, you must first select a menu using the arrow buttons, then press the START button.
(Cooking will not begin if you press the START button immediately while in standby mode.)

<Screen on standby
(HIGH PRESSURE MODE)>



When
changing
into the non
pressure
mode



After non
pressure
menus flash
for 3 seconds

 
<Screen on standby
(NON PRESSURE MODE)>



2 If the Lock/Unlock Handle is left in the neutral position, not set to “凸 NON PRESSURE” or “HIGH PRESSURE 凸”, you cannot select a menu or start cooking.

- ▶ A voice prompt will say, “Turn the Lock/Unlock Handle to the desired pressure position” when the arrow or start button is pressed.
- ▶ Turn the Lock/Unlock Handle fully to select either High Pressure or Non-Pressure mode.

<With the cover handle in the
neutral position>



! Precautions

Precautions when using NON PRESSURE STEAM.

- Do not cook over the specified capacity.
- If the specified capacity is exceeded, it will overflow.

VOICE SETTING

Voice setting function

You may select your preferred voice among, 'Korean and English'. The default is English.

► How to enter settings mode




1. To enter voice settings mode in standby:

- Press the [MODE] button 8 times until "SET" appears, then press the [START] button.
- Alternatively, press and hold the [OK] button for more than 2 seconds in standby mode.

Notes:

- When pressing the [MODE] button for the first time, hold it for at least 0.3 seconds.
- Each press of the [MODE] button advances the selection by one step.

► How to set up voice

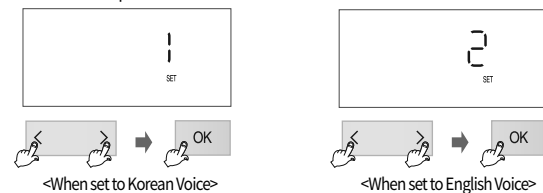

2. Use the 'Arrow' buttons to select the voice language (English or Korean), then press the [OK] button to confirm.
3. Pressing [CANCEL] or leaving it idle for 7 seconds will cancel the setting and return to standby mode.

1 Select the desired pressure mode with the lid engagement knob. 2 Press the [START] button to start cooking.

Selecting Pressure Mode

Use the lid engagement knob to select the desired pressure mode.

- Ensure the removable cover is properly installed.
- If the correct pressure mode is not selected, you cannot select a menu.
- In High Pressure Mode, only high pressure menus can be selected.
- In Non-Pressure Mode, only non-pressure menus can be selected.

< HIGH PRESSURE MODE >

Each press of the right arrow button cycles through the following menus:
 High-Pressure White Rice → High-Pressure Quick White Rice → Sticky Multi-Grain Rice → Quick Sticky Multi-Grain Rice → Sticky Brown Rice → Multi Cook

< NON-PRESSURE MODE >

 
Each press of the right arrow button cycles through the following menus:
 Non-Pressure White Rice → Quinoa → Frozen Stored Rice → Steel-Cut Oats → Porridge

Menu Memory:

For High-Pressure White Rice, Sticky Multi-Grain Rice, Sticky Brown Rice, and Non-Pressure White Rice, the menu will be memorized after cooking. No need to select the menu again for continuous use.



ex) When selecting High-Pressure White Rice



2 Press the [START] button to start cooking.

Before Cooking:

- For high-pressure menus, turn the lid Lock/Unlock Handle to "HIGH PRESSURE" and press the [START] button.
- For non-pressure menus, turn the lid Lock/Unlock Handle to "NON PRESSURE" and press the [START] button.
- The estimated cook time will be displayed for the first minute after starting.
- Actual cooking time may vary depending on factors such as cooking capacity, water temperature, and cooking conditions.
- Starting one minute after cooking begins, the remaining cook time will be displayed for 10-second intervals.
 (Except for GABA process, MULTI-COOK, STEEL CUT OATS, and PORRIDGE.)



ex) When cooking High-Pressure white rice in high pressure mode

3 Steaming

- The remaining cook time is displayed once cooking is in progress.
- Cook time varies depending on the selected menu.
- Be cautious of the Auto Steam Release Outlet to avoid burns.

ex) In case of 10 minutes left.



4 End of Cooking:

- When cooking is complete, the warming mode will start, accompanied by the voice message: "Cuckoo has finished cooking your delicious high-pressure white rice."
- To stop warming, press the [CANCEL] button for more than 0.3 seconds.
 Stir the rice immediately after cooking. If left unstirred, rice may spoil and develop a bad smell.
- Do not press the [CANCEL] button during cooking.



Cooking time by Menu

Menu	HIGH-PRESSURE WHITE RICE	HIGH-PRESSURE Quick WHITE RICE	STICKY MULTI-GRAIN RICE	Quick STICKY MULTI-GRAIN RICE	STICKY BROWN RICE	NON-PRESSURE WHITE RICE	Quinoa	FROZEN STORED RICE	THICK PORRIDGE	THIN PORRIDGE	STEEL CUT OATS	MULTI COOK
CAPACITY	1-6 PERSONS	1-4 PERSONS	1-4 PERSONS	1-4 PERSONS	1-4 PERSONS	1-4 PERSONS	1-4 PERSONS	1-4 PERSONS	1-1.5 CUPS	0.5-1 CUPS	1-2 CUPS	-
COOKING TIME	Approx. 22-33 min	Approx. 13-21 min	Approx. 40-45 min	Approx. 25-31 min	Approx. 45-52 min	Approx. 34-40 min	Approx. 32-41 min	Approx. 26-31 min	Approx. 35-45 min	Approx. 40-50 min	Approx. 45-65 min	10-90min

※ After cooking, odors may linger in the unit. Clean the rubber packing and lid as instructed on pages 13-14 before using the unit again.

※ Cooking times may vary depending on the product's environment and usage conditions.


HOW TO COOK / HOW TO AUTO CLEAN

How to use the cooking menu

HI-PRESSURE WHITE RICE	Use this function to cook high pressure white rice.	STICKY MULTI GRAIN RICE	Used to cook a variation of mixed or brown rice.
STICKY BROWN RICE(0H)	Used to cook variation of brown rice.	STICKY BROWN RICE(3H)	Used to cook germinated brown rice.
NON PRESS WHITE RICE	Used for soft non-pressure white rice with a fluffy texture.	QUINOA	Select this menu to cook quinoa and other grains.
FROZEN STORED RICE	This menu is used to prepare rice for freezing.	STEEL-CUT OATS	Select this menu to cook steel-cut oats.
PORRIDGE	For cooking porridge.	MULTI COOK	Allows you to set the temperature, heating power and cooking time manually for your dish.
HI-PRESSURE QUICK WHITE RICE	- Selecting "HI-P/WHITE QUICK" reduces the total cooking time. (For 1 serving of white rice, it takes about 13 minutes.) - Use the "HI-P/WHITE QUICK" function only for cooking rice for up to 4 servings. - "HI-P/WHITE QUICK" may affect the quality of the rice, so it's best used for less than 4 cups. - For better taste, soak the rice in water for about 20 minutes before using the quick cooking option.		
QUICK STICKY MULTI GRAIN RICE	- Selecting "MULTI-GRAIN QUICK" reduces the total cooking time. (It takes about 25 minutes to cook multi-grain rice for 1 serving.) - "MULTI-GRAIN QUICK" may affect the quality of the rice, so it's best used for cooking less than 4 cups.		

- After cooking in High Pressure QUICK White Rice, QUICK Sticky Multi-Grain Rice, or when cooking small portions, discard any remaining water.
- For best results, follow the detailed cooking instructions for each menu.
- Do not cook thick or sticky foods, such as jujube porridge, using the "PORRIDGE" menu. It may block the steam outlet and cause safety issues.
- Only use ingredients recommended in the user manual's cooking guide.

How to Use the Auto Clean Function (Steam Cleaning)

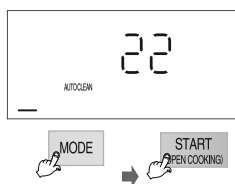

- Fill the inner pot with water up to the "AUTO CLEAN" water scale line.
- Close the lid and turn the handle to either HIGH PRESSURE or NON PRESSURE mode.

Steps :

1. While in standby mode, press the MODE button until "AUTO CLEAN" is displayed.
2. Press the START button to begin the cleaning process.

- ※ Press and hold the MODE button for at least 0.3 seconds the first time.
- ※ Each press of the MODE button moves through the menu one step at a time.
- ※ Regular use of the Auto Clean function helps keep the steam valve clean.
- ※ After cleaning, be sure to wipe away any remaining moisture from the Silent Steam Shield.

Searing Effect

You may notice a light brown or golden color at the bottom of the cooked rice. This is normal and results from the cooker enhancing the rice's flavor and aroma. This natural browning, known as melanoizing, is more noticeable during preset cooking than during immediate cooking.

- ※ Mixing other types of rice with white rice may intensify the browning effect.
- ※ This is not a malfunction.

What is Open Cooking?

Open Cooking is a function that allows the user to temporarily release the smart locking device during a non-pressure cooking process. This enables the user to safely open the lid to add ingredients or stir the contents inside the pot.

How to Use the Open Cooking Function

- 1 During a non-pressure menu cooking process, press the **START/OPEN COOKING** button.



< Button Indication >

- 2 Wait for the smart locking device to release.

 
► This may take between 5 to 60 seconds.



< Remaining time under released locking device >

- 3 Once the display indicates that it is safe to open the lid, proceed to do so.

- You will hear an audible instruction: "Please open the lid."
- Do not press the Open Lid button while the smart locking device's remaining time is still displayed or if cooking is in progress.
- Only press the Open Lid button when the Add Ingredients indicator is illuminated.



< Add ingredient indication >

- 4 After opening the lid, be sure to close it within 3 minutes.

- If the lid remains open for more than 3 minutes, the cooking process will be automatically canceled.




< Cooking process indication >

CAUTION

Cautions for Open Cooking

- Do not exceed the designated capacity.
 - If the designated capacity is exceeded, the appliance may overflow due to boiling.
 - The inner pot will not be heated while the lid is open.
 - Burn Hazard: Do not remove the detachable cover while the appliance is in use.
 - Only close the lid when the inner pot and detachable cover are properly assembled.
 - Pressing the lid clamp knob while the smart locking device is activated may cause damage to the appliance. Only press the Open Lid button when the Add Ingredients Indicator is active.
 - Contact Cuckoo Customer Service if the appliance does not operate properly.
 - If the lid does not open after open cooking or non-pressure cooking is completed: Unlock the smart locking device using the cover as shown on the right, then push the clamp knob to open.
 - If error code "EL1" appears, please contact Customer Service for assistance.
 - If error code "EL2" appears, do not open the lid until cooking is fully completed.
 - If the error occurs during warming or standby mode, turn off the power and then open the lid.
- Please contact the service center for further support.

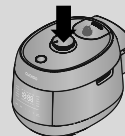


HOW TO PRESET TIMER FOR COOKING / REHEATING FUNCTION

How to Use the Timer for Cooking

For example, if it's nine o'clock in the evening and you want to have warm breakfast at 7:40 the next morning:


1 Ensure the current time is correct.

 - ▶ If the current time is not set correctly, the preset cooking time will also be inaccurate.
- ▶ Be sure to set the correct AM or PM time.




2 Turn the Lock/Unlock Handle toward "HIGH PRESSURE" or "NON PRESSURE", then press the MODE button to select "TIMER."

- ▶ Press and hold the MODE button for at least 0.3 seconds the first time.
- ▶ Each press of the MODE button will move the menu one step forward.
- ▶ In High Pressure mode, the preset timer function cannot be used with the following menus:
 - GABA RICE (3H)
 - HI-PRESSURE QUICK WHITE RICE
 - QUICK STICKY MULTI GRAIN RICE
- ※ To preset a timer while in Warm mode, press the Cancel button to exit Keep Warm mode, then configure the preset timer.

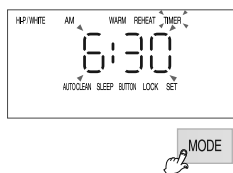


3 Set the Preset Time Using the Arrow Buttons and Press the OK Button.

- ▶ Each press of the > button increases the preset time by 10 minutes.
- ▶ Each press of the < button also increases the preset time by 10 minutes.
- ▶ If you hold down the button, the time will continue to increase (repeated adjustment is allowed).
- ※ Be careful not to accidentally switch between AM and PM.

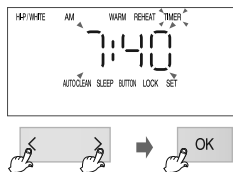

4 Select a Menu Using the Arrow Buttons and Press the START Button.

- ▶ Cooking will begin and complete as scheduled.
(Note: Completion time may vary depending on appliance conditions or rice quantity.)
- ▶ Once the preset cook is completed, the time setting is saved in memory. There's no need to reconfigure the timer for the same setting.
- ▶ If a small quantity of rice is cooked, it may finish earlier than the preset time.

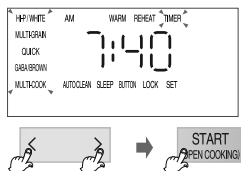

HOW TO PRESET TIMER FOR COOKING / REHEATING FUNCTION

 
How to Use the Preset Reheating Function

- ▶ Use this function when cooked rice is not being kept warm in the rice cooker but you still want to enjoy a hot meal later at your convenience
- ▶ It takes approximately 100 minutes to fully reheat the rice. Please set the timer at least 100 minutes in advance of your intended mealtime.

For example, if it's 9:00 PM and you want warm rice by 7:40 AM the next morning:


1 Ensure the current time is correct

- ▶ Confirm that the current time is accurately set, so the reheating process ends at your desired time.
- ▶ Avoid confusion between AM and PM settings.



2 Turn the Lock/Unlock Handle to "HIGH PRESSURE 𠄎" and press the MODE button to select "REHEAT TIMER"


- ▶ Hold the MODE button for at least 0.3 seconds the first time.
- ▶ Each press of the MODE button advances the menu by one step.
- ▶ Ensure the Lock/Unlock Handle is securely turned to High Pressure mode before using the "REHEAT TIMER" function.

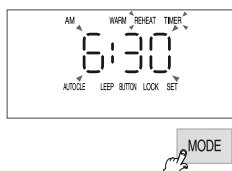

3 Use the Arrow Buttons to Set the Desired Completion Time for Reheating

- ▶ Press the (▶) button to increase the time by 10 minutes with each press.
- ▶ Press the (◀) button to also increase the time by 10 minutes with each press.
- ▶ Holding down the button will continuously adjust the time.
(Repetitive input is allowed.)

※ Be cautious not to switch between AM and PM unintentionally.

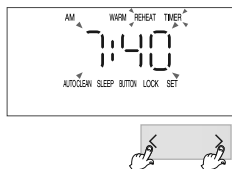

4 Press the START Button

- ▶ Reheating will begin and complete as scheduled.
- ▶ Once reheating is completed with a preset time, that time is saved in the memory. You do not need to reconfigure it again for future use.



PRECAUTIONS FOR PRESET COOKING / REHEATING

Precautions for Preset Cooking / Reheating

1 In Case of Preset Cooking

- ▶ If the rice is old and dry, the results may be poor.
- ▶ If the rice is undercooked, add water up to half the scale to improve the result.
- ▶ A longer preset time may increase the chance of rice melanoidin (browning).
- ▶ Rinsed rice contains residual starch, which may cause burning during preset timer cooking.
- To reduce scorching, rinse the rice thoroughly in running water or decrease the cooking quantity.

2 In Case of Preset Reheating

- ▶ Leaving cooked rice at room temperature for extended periods can cause moisture to evaporate. In such cases, reheating may dry out the rice or cause slight browning (melanoidin).
- ▶ If the pot contains a large amount of rice, it may not reheat evenly.
It is recommended to reheat portions no larger than for three people (about half of the inner pot).
- ▶ Reheating cold or frozen rice may result in uneven heating, dryness, or partial burning.
- ▶ Before reheating cold-stored rice, place it in the pot, loosen it with a scoop, and then start reheating.
- ▶ Frozen rice should be fully thawed before using the reheating function.

3 Changing the Preset Time

- ▶ To change the preset time, press and hold the CANCEL button for more than 0.3 seconds, then restart the process.

4 If the Preset Time Is Outside the Available Range

- ▶ If the preset time is shorter than the cooking duration, cooking will start immediately.
- ▶ If the reheating preset time is shorter than the minimum required (100 minutes), reheating will start immediately.

5 If the Preset Time Exceeds 13 Hours

- ▶ “13H” will be displayed, and the preset time will automatically be limited to 13 hours.
Example: If you set the finish time to 7:00 AM the next day, but it's 5:00 PM on the current day (preset time = 14 hours), the system will display “13H” and reset the time to 6:00 AM.
(Maximum allowable preset time is 13 hours.)

Additional Notes:

- If the preset time exceeds 13 hours, it may result in spoilage or a bad odor.
- The 13-hour limit helps prevent rice from spoiling, especially during hot weather.
- Use the Preset Cooking function for finish times between 1 and 13 hours.
- Use the Preset Reheating function when your finish time falls between 100 minutes and 13 hours.
- Press the START button during preset cooking to check the current time; it will be displayed for 2 seconds.

Possible Preset Time Settings by Menu

Menu	HIGH-PRESSURE WHITE RICE	STICKY MULTI GRAIN RICE	STICKY BROWN RICE	NON-PRESSURE WHITE RICE	QUINOA	FROZEN STORED RICE	HIGH-PRESSURE QUICK WHICE RICE	QUICK MULTI GRAIN RICE	THICK PORRIDGE	THIN PORRIDGE	MULTI COOK	STEEL CUT OATS
Possible time Setting	from 36minutes to 13hours	from 53minutes to 13hours	from 61minutes to 13hours	from 47minutes to 13hours	from 47minutes to 13hours	from 38minutes to 13hours	Preset timer not supported		From (Set time + 1 minute) to 13 hours			

Check Before Reporting a Malfunction

▼ If there is a problem with your cooker, please check the following before contacting the customer service office.

Case	Check points	Check points
When the Lock/Unlock handle does not move in the “Unlock” direction	• Did you turn the Lock/Unlock handle during operation? • Did you turn the Lock/Unlock Handle without the main body completely releasing the steam?	• The lid will not open during cooking. Do not force open the lid. If you must open the lid, press the Cancel button for 0.3 seconds (1.5 seconds if the inner pot temperature is high) to cancel cooking. Then, tilt the pressure weight to completely release the steam and open the lid. • Always tilt the pressure weight to completely release the steam before opening the lid.
If the lid does not open even though the Lock/Unlock handle is fully turned in the “Unlock” direction		• This is because of the pressure in the inner pot. • Tilt the pressure weight to completely release the steam and open the lid.
When the “High Pressure”, “Non Pressure” mark flashes with a beep sound during reservation cooking	• Did you turn the Lock/Unlock handle fully in the direction of “Lock” or “Unlock”?	• Turn the Lock/Unlock handle fully in the direction of “Lock” or “Unlock”.
When steam leaks through the lid or there is a “whoosh” whistle	• Are there any foreign substances (rice grains, etc.) on the packing? • Is the packing worn out?	• Clean the packing with a soft cloth before use. • Always keep the area around the packing clean. • If steam leaks, immediately press the Cancel button for 0.3 seconds (1.5 seconds if the inner pot temperature is high) to release the steam, disconnect the power plug, and contact the customer service center. • Replace the packing after 1 - 3 years of use depending on the method and frequency of use. If you continue to use the old packing, steam may leak and pressure cooking may not be possible.
When the Cancel button does not work during cooking	• Is the inside of the inner pot hot? • Is the button lock working?	• If you inevitably need to cancel cooking, you must press the cancel button for 0.3 seconds (1.5 seconds if the inner pot temperature is high) for safety to cancel cooking. • If cooking is canceled, the contents may scatter as the steam is released to the automatic steam discharge device, so be careful as it may cause burns on your face and hands. • Press the Auto Wash/Lock button for 2 seconds or longer to disable the button lock function.
When there is a strange noise during cooking or keeping warm	• Does it make a windy sound (“Bung”) when cooking? • Do you hear a “bzz” sound during cooking or warming?	• This is the sound of the blower motor running to cool the internal parts. There is no problem with the product. • “Bzz” sound during cooking or warming is the sound of the IH pressure cooker operating. There is no problem with the product.
When brown rice does not germinate properly	• Did you germinate more than the rated amount of brown rice? • Did you use old brown rice?	• Please put the brown rice of the rated amount. • The germination rate may decrease when old brown rice or contaminated brown rice is used.
When “L” is displayed when you press the button	• Is the inner pot inserted? • Did you use the product for 120V (power)?	• The buttons do not work when the inner pot is not inserted. Please insert the inner pot. • This product is for 120V only. Use the power properly.
When buttons does not work, and “E” is displayed	• Did you turn the Lock/Unlock handle fully in the direction of “Lock” or “Unlock”? • Is the “High Pressure” or “Non Pressure” mark displayed?	• Turn the Lock/Unlock handle fully in the direction of “Lock” or “Unlock”. If you do not fully turn the Lock/Unlock handle, the Cook and Reservation buttons will not work.
When “L” ↔ “C” flash alternately	• Is the lid open?	• When making high-pressure/Non-pressure cooking, warming/reheating, or making reservations, please close the lid before proceeding. • If the lid is not closed during cooking, there is a risk of burns due to hot steam.
When “E” sign shows up	• Was the power of the product cut off for more than 10 minutes during cooking?	• Press the Cancel button to release the “E10” mark and cook again.

Check Before Reporting a Malfunction

▼ If there is a problem with your cooker, please check the following before contacting the customer service office.

Case	Check points	Check points
When the rice is too sticky	- Are there any foreign substances or rice grains on the outside of the temperature sensor or inner pot? - Did you set the "Customized Cooking" function?	- Remove foreign substances from the temperature sensor and the outer surface of the inner pot. (Refer to pages 13) - Cook after setting the customized cooking function as necessary.
When cooking is not completed for a long time and "E 03" is displayed	Are you using the product with 120V power?	- This is the mark that appears when cooking is not completed for a long time due to product malfunction (heater disconnection, heating failure, etc.). Turn off the power and contact the customer service center. - This product is for 120V only. Use the power properly.
When the reserved cooking time is not correct	- Is the current time set correctly? - Did you set AM or PM correctly? - Did you set a reservation time longer than 13 hours?	- If the current time is not set, cooking will not be completed at the reserved time. Set the current time. - Please check the AM/PM status. - The maximum reservation time is 13 hours. (Refer to page 24)
When the rice smells bad right after cooking or during warming	Did you clean up the product after cooking braised chicken or braised ribs?	Refer to page 13 and wipe the packing on the lid clean before using.
When the lid does not close	- Is the Lock/Unlock handle fully turned () "Unlocked"  direction? - Is there rice or hot food in the inner pot? - Did you put the inner pot in the main body?	- Turn the Lock/Unlock handle fully in the direction of "Unlock" and close the lid. - Tilt the pressure weight and close the lid. - Turn the inner pot handle attached to the inner pot to the left or right to completely seat it on the main body.
"E 04" and "E 05" are shown on the LCD by turns	There is a problem with the power of the micom.	Turn off the power and contact the customer service center.
"E 06" and "E 07" are shown on the LCD by turns	There is a problem with the environmental sensor.	Turn off the power and contact the customer service center.
When "E 08" sign shows up	There is an error in the internal memory of the microcomputer.	Turn off the power and contact the customer service center.
When "H-F" mark is displayed during the warming or when you press Cook button or Warming/Reheating; or When "H-F" mark is displayed during the cooking		This is a function to check power or product abnormality. If this appears continuously, contact the customer service office.
When the rice is not cooked	- Did you press the Cook button? - Was there a power outage during cooking?	- Press the Cook button once and check "E 09" sign on the display. - Refer to page 34 for the power outage compensation function.
When the rice is undercooked or dry; or When only the bottom rice is cooked	- Did you use the measuring cup for the rice? - Did you put proper amount of water? - Did you rinse the rice before cooking? - Did you put rice in water for a long time? - Was the rice old or dry? - Did you run the automatic cleaning function regularly?	- Refer to pages 36-37 for proper use. - Add water about half a scale and cook. - Refer to page 20 for proper use.
When "E 10" sign shows up	There is a problem with the smart lock.	Turn off the power and contact the customer service center.
When "E 11" sign shows up	There is a problem with the smart lock.	- Do not open the lid until the cooking is complete. - If you want to open the lid while the warming function is on or in standby, turn off the power and open the lid. - Please contact the customer service office.

Check Before Reporting a Malfunction

▼ If there is a problem with your cooker, please check the following before contacting the customer service office.

Case	Check points	Check points
When the beans (mixed grain / brown rice) are half-cooked	• Are the beans (mixed grain / brown rice) too dry?	• Soak or boil beans (mixed grain / brown rice) and cook them in the Mixed Rice menu. Depending on the type of mixed grains, the rice may be half-cooked.
When the rice is too watery or stiff	• Did you choose the menu correctly? • Did you put proper amount of water? • Did you open the lid before cooking was finished?	• Select the desired menu correctly. • Adjust the water accurately. (Refer to pages 36) • After the cooking completion sound is heard and the pressure is completely released, open the lid and mix the rice.
When the water overflows during cooking	• Did you use the measuring cup for the rice? • Did you put proper amount of water? • Did you choose the menu correctly?	• Refer to pages 36 for proper use.
When you smell odors while warming	• Did you close the lid? • Did the power plug come out of the outlet while the warming function was operating? • Did you keep the rice warm for more than 12 hours or keep too little rice warm? • Did you leave a rice paddle, cold rice, or other types of rice in the inner pot while keeping warm?	• Please close the lid completely. • Always plug in the power plug during warming. • Keep warming time within 12 hours. • Do not heat a menu other than white rice and cold rice.
“E _ _”, “E _ P”, “E _ t” sign shows up	• Displayed when there is a problem with the temperature sensor.	• Turn off the power and contact the customer service center.
When “E _ F” sign blinks	• Displayed when there is a problem with the cooling fan.	• Turn off the power and contact the customer service center.
When the warming-end mark blinks during warming	• Has 24 hours passed since you started keeping the rice warm?	• After 24 hours of warming, the warming time end mark is displayed blinking to indicate that the warming has elapsed for a long time.
When the rice is cold or a lot of water is generated during warming	• Did you set the warming function to sleep warming mode?	• If necessary, turn off or on the sleep warming mode and keep rice warm.
When “E d o” sign shows up	• Did you ever press the Cook button in the state where warming was canceled (standby state) without turning the Lock/Unlock handle in the “Unlock” direction when the power was applied after cooking was completed?	• Turn the Lock/Unlock handle in the direction of “Unlock” and then turn it in the direction of “Lock”.
When the power does not turn on after connecting the power cable	• Is the standby power cut-off switch set to  (ON)?	• Change the standby power cut-off switch from  (OFF) to  (ON).

COOKING GUIDE

WHITE RICE (High Pressure Menu)

⚠ White Rice Cautions

- All cup measurements use the provided rice measuring cup. (Water: 180 ml / Rice: 150 g)

:: White Rice



Ingredients

White Rice: 4 cups (600 g)

Instructions

- 1 Place clean, washed rice into the inner pot and add water up to the WHITE RICE 4 line.
- 2 Close the lid and set the handle to High Pressure mode.
- 3 Select [High Pressure White Rice] using the Arrow buttons buttons, then press Start to begin cooking.
- 4 When the cooker switches to Keep Warm mode, open the lid and stir the rice gently.

Reference Tips

- For freshly harvested or glutinous rice, add slightly less water than indicated.
- For older rice, add slightly more water than indicated.
(Adjust the water amount based on your preference.)

MULTI-GRAIN RICE (High Pressure Menu)

⚠ Multi-Grain Rice Cautions

- All cup measurements use the provided rice measuring cup. (Water: 180 ml / Rice: 150 g)

:: Multi-Grain Rice



Ingredients

- White Rice: 2 cups (300 g)
- Brown Rice: 2 cups (300 g)

Instructions

- 1 Place clean, washed rice into the inner pot and add water up to the MULTI GRAIN 4 line.
- 2 Close the lid and set the handle to High Pressure mode.
- 3 Select [Multi Grain Rice] using the Arrow buttons buttons, then press Start to begin cooking.
- 4 When the cooker switches to Keep Warm mode, open the lid and mix the rice well.

BROWN RICE (High Pressure Menu)

⚠ Brown Rice Cautions

- All cup measurements use the provided rice measuring cup. (Water: 180 ml / Rice: 150 g)

:: Brown Rice



Ingredients

- Brown Rice: 4 cups (600 g)

Instructions

- 1 Place clean, washed rice into the inner pot, then add water up to the BROWN RICE 4 line.
- 2 Close the lid and turn the handle to High Pressure mode.
- 3 Select [Sticky Brown Rice] using the Arrow buttons buttons. Set the germination time to 0 hours, then press the Start button to begin cooking.
- 4 When the cooker switches to Keep Warm mode, open the lid and mix the rice thoroughly.

Reference Tips

- When cooking glutinous brown rice, add slightly less water than indicated.
(Adjust water levels to suit your taste.)
- You can adjust the germination time according to your preference before cooking.

PORRIDGE (Non Pressure Menu)

⚠ Porridge Cautions

- All measurements use the provided rice measuring cup. (Water: 180 ml / Rice: 150 g)
- Do not exceed the cooker's capacity. Overfilling can cause overflow and potential damage.

:: Porridge



Ingredients

White Rice: 1 cup (150 g)

Instructions

- 1 Wash the rice and place it into the inner pot. Add water up to the PORR mark (gradation 1).
- 2 Close the lid and turn the handle to Non Pressure mode.
- 3 Select [Porridge] using the Menu button. Set the timer to 35 minutes, then press Start.

Reference Tips

- Do not exceed the recommended ingredient amount.
- Overfilling may result in boiling over.
- Keep the lid closed during cooking to avoid bubbling, splattering, or burns.
- Only use ingredients specified in the Cooking Guide.
- Do not cook glutinous ingredients (e.g., millet) using the porridge setting — they can block the steam outlet.

QUINOA (Non Pressure Menu)

⚠ Quinoa Cautions

- All measurements use the provided rice measuring cup. (Water: 180 ml / Rice: 150 g)
- Note: Grain weights differ from rice. Please follow quinoa-specific measurements.

:: Quinoa



Ingredients

Quinoa: 4 cups (540 g) (1 cup quinoa ≈ 135 g)

Instructions

- 1 Rinse quinoa using a sieve. Place it in the inner pot and add water up to the 4 line on the Non Pressure White Rice scale.
- 2 Close the lid and set the handle to Non Pressure mode.
- 3 Select [Quinoa] using the Arrow buttons buttons, then press Start.
- 4 Once it switches to Keep Warm, open the lid and mix well.

Reference Tips

- Some grains may brown slightly due to melanoidin development.
- Do not exceed the recommended capacity to prevent overflow.

STEEL CUT OATS (Non Pressure Menu)

⚠ Steel Cut Oats Cautions

- All measurements use the provided rice measuring cup.
- For 100% grains, adjust weight as grain mass differs from rice (150 g per cup).

:: Steel Cut Oats



Ingredients

Ingredients	Steel-Cut Oats (100%)		
	1cup	1.5cup	2cup
Steel cut oats	120g(1cup)	180g(2cup)	240g(2cup)
Water	360g(2cup)	540g(3cup)	720g(4cup)

Instructions

- 1 Place the steel cut oats and water into the inner pot.
- 2 Close the lid and press the Select button for [STEEL CUT OATS].
- 3 Set the cooking time based on quantity:
 - 1 cup: 45 minutes
 - 1.5 cups: 55 minutes
 - 2 cups: 65 minutes
- 4 Press the Start button to begin cooking.

MEMO

CUCKOO ELECTRIC RICE COOKER/WARMER LIMITED WARRANTY

CUCKOO ELECTRONICS AMERICA will, at its discretion, repair or replace, free of charge, any product found to be defective in materials or workmanship under normal use during the warranty period outlined below, starting from the date of the original purchase. This warranty is valid only for the original purchaser of the product and applies exclusively within the United States and Canada during the warranty period.

MODEL#	#LABOR	PARTS	WARRANTY PERIOD
CRP-PHT06	1YEAR	1YEAR	HOW SERVICE IS HANDLED
			Cuckoo Electronics America Call: 213 228 5330 Address: 16610 Marquardt Ave. Cerritos, CA 90703, USA Canada (Vancouver) Call: 604 540 1004 Address: 945 Lougheed Hwy Coquitlam BC Canada V3K 3T4

No other express warranty is applicable to this product. **THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. CUCKOO ELECTRONICS CO.,LTD, SHALL NOT BE LIABLE FOR THE LOSS THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.**

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts : so these limitations or exclusions may apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE ABOVE WARRANTY DOES NOT APPLY IN THESE CASES:

- * To damage issues which result from delivery or improper installation.
- * To issues which result from misuse, abuse, accident, alteration, or incorrect electrical current or voltage.
- * To assist with inquiries unrelated to defective materials or workmanship, including providing guidance on the proper operation of the unit.

Therefore, these costs are paid by the consumer. Customer assistance numbers :

To Prove Warranty Coverage : ► **Retain your Sales Receipt to provide proof of purchase.**
► **Copy of your Sales Receipt must submitted at the time warranty service is provided.**

To Obtain Product, Customer, or Service Assistance and Nearest Authorized service center, Parts Distributor or Sales Dealer:

To obtain product, customer or service assistance, please visit our website and find nearest service center.
Web : <https://cuckooamerica.com/pages/in-person-service-center>
Email : support@cuckooamerica.com